

Table of contents

+	+	+	Table of contents.....	1
+	+	+	Usage Notice.....	3
			Safety Information.....	3
			Precautions.....	5
			Eye Safety Warnings.....	7
+	+	+	Introduction.....	8
			Package Overview.....	8
			Product Overview.....	9
			Main Unit.....	9
			Connection Ports.....	10
			Remote Control.....	11
+	+	+	Installation.....	12
			Connecting the Projector.....	12
			Connect to Notebook.....	12
			Connect to Video Sources.....	13
			Powering On/Off the Projector.....	14
			Powering On the Projector.....	14
			Powering Off the Projector.....	15
			Warning Indicator.....	15
			Adjusting the Projected Image.....	16
			Adjusting the Projector's Height.....	16
			Adjusting the vertical image position.....	16
			Adjusting Projection Image Size (WXGA).....	17
			Adjusting Projection Image Size (1080p).....	18
+	+	+	User Controls.....	19
			Remote Control.....	19
			On-screen Display Menus.....	22
			How to operate.....	22
			Menu Tree.....	23
			Image.....	28
			Image Advanced.....	30
			Image Advanced Color Matching.....	32
			Image Advanced Signal.....	33
			Display.....	34
			Display 3D.....	36
			Setup.....	37
			Setup Language.....	39
			Setup Security.....	40
			Setup Audio Settings.....	43
			Setup Advanced.....	44
			Setup Network.....	45
			Setup LAN Settings.....	46
			Setup Control Settings.....	47
			Options.....	48

Table of contents

Options Input Source	51
Options Remote Settings	52
Options Advanced	53
Options Lamp Setting.....	55
LAN_RJ45	57
➤➤➤ Appendices.....	68
Troubleshooting	68
Image	68
Other	69
Projector LED Status Indicator.....	70
Remote Control.....	71
Replacing the Lamp	72
Compatibility Modes.....	75
Video Compatibility	75
Video Timing Detail Describe.....	75
Computer Compatibility - VESA standards	76
Input Signal for HDMI/DVI-D	77
True 3D Video Compatibility table.....	78
RS232 Commands and Protocol Function List	79
RS232 Pin Assignments (projector side)	79
RS232 Protocol Function List.....	80
Telnet Commands.....	98
AMX Device Discovery commands	98
PJLink™ supported commands	99
Trademarks	101
Ceiling Mount Installation.....	103
Optoma Global Offices	104
Regulation & Safety Notices	106

Safety Information

	The lightning flash with arrow head within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

Class B emissions limits

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Important Safety Instruction

1. Do not block any ventilation openings. To ensure reliable operation of the projector and to protect from over heating, it is recommended to install the projector in a location that does not block ventilation. As an example, do not place the projector on a crowded coffee table, sofa, bed, etc. Do not put the projector in an enclosure such as a book case or a cabinet that restricts air flow.
2. Do not use the projector near water or moisture. To reduce the risk of fire and/or electric shock, do not expose the projector to rain or moisture.
3. Do not install near heat sources such as radiators, heaters, stoves or any other apparatus such as amplifiers that emits heat.
4. Clean only with dry cloth.

Usage Notice

5. Only use attachments/accessories specified by the manufacturer.
6. Do not use the unit if it has been physically damaged or abused.

Physical damage/abuse would be (but not limited to):

- Unit has been dropped.
- Power supply cord or plug has been damaged.
- Liquid has been spilled on to the projector.
- Projector has been exposed to rain or moisture.
- Something has fallen in the projector or something is loose inside.

Do not attempt to service the unit yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Optoma before you send the unit for repair.

7. Do not let objects or liquids enter the projector. They may touch dangerous voltage points and short out parts that could result in fire or electric shock.
8. See projector enclosure for safety related markings.
9. The unit should only be repaired by appropriate service personnel.

Precautions



Please follow all warnings, precautions and maintenance as recommended in this user's guide.

- Warning- Do not look into the projector's lens when the lamp is on. The bright light may hurt your eyes.
- Warning- To reduce the risk of fire or electric shock, do not expose this projector to rain or moisture.
- Warning- Please do not open or disassemble the projector as this may cause electric shock.
- Warning- When replacing the lamp, please allow the unit to cool down. Follow instructions as described on page 72.
- Warning- This projector will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.
- Warning- Reset the "Lamp Reset" function from the on-screen display "System|Lamp Setting" menu after replacing the lamp module (refer to pages 55-56).
- Warning- When switching the projector off, please ensure the cooling cycle has been completed before disconnecting power. Allow 90 seconds for the projector to cool down.
- Warning- Do not use lens cap when projector is in operation.
- Warning- When the lamp is approaching to the end of its life time, the message "Replacement suggested" will show on the screen. Please contact your local reseller or service center to change the lamp as soon as possible.

Note

When the lamp reaches the end of its life, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under "Replacing the Lamp" section on page 72.

Usage Notice



Do:

- ■ Turn off and unplug the power plug from the AC outlet before cleaning the product.
- ■ Use a soft dry cloth with mild detergent to clean the display housing.
- ■ Disconnect the power plug from AC outlet if the product is not being used for a long period of time.



Do not:

- ■ Block the slots and openings on the unit provided for ventilation.
- ■ Use abrasive cleaners, waxes or solvents to clean the unit.
- ■ Use under the following conditions:
 - In extremely hot, cold or humid environments.
 - ▶ Ensure that the ambient room temperature is within 5 - 40°C
 - ▶ Relative Humidity is 10 - 85% (Max.), non-condensing
 - In areas susceptible to excessive dust and dirt.
 - Near any appliance generating a strong magnetic field.
 - In direct sunlight.

Note

Keep this manual for future reference.

Eye Safety Warnings



- Avoid staring/facing directly into the projector beam at all times. Keep your back to the beam as much as possible.
- When projector is used in a classroom, adequately supervise students when they are asked to point out something on the screen.
- In order to minimize the lamp power, use room blinds to reduce ambient light levels.


Introduction

Package Overview


Unpack and inspect the box contents to ensure all parts listed below are in the box. If something is missing, please contact Optoma customer service.



Projector with lens cap




Power Cord 1.8m




15 pin D-sub VGA Cable

Note


Due to different applications in each Country, some regions may have different accessories.



Remote Control



2 x AAA Batteries

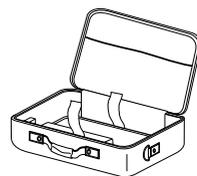


Carrying Case

Documentation :

- User's Manual
- Warranty Card
- Quick Start Guide
- WEEE Card

Product Overview


Main Unit

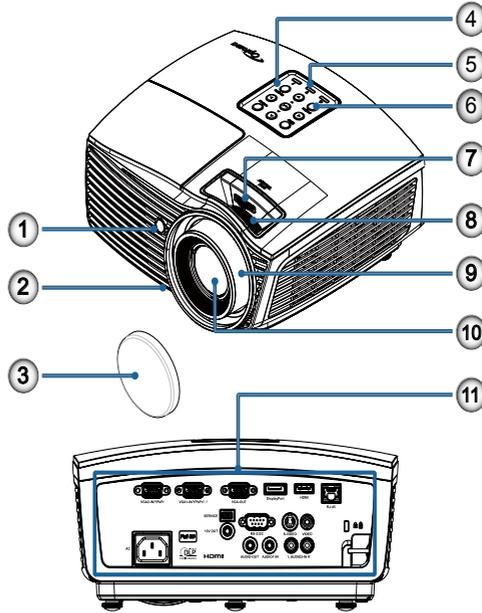

1. IR Receiver
2. Tilt-Adjustment Feet
3. Lens Cap
4. Function Keys
5. LED Indicators
6. Power Button
7. LENS SHIFT
8. Zoom
9. Focus
10. Lens
11. Connection Ports

Introduction

Connection Ports

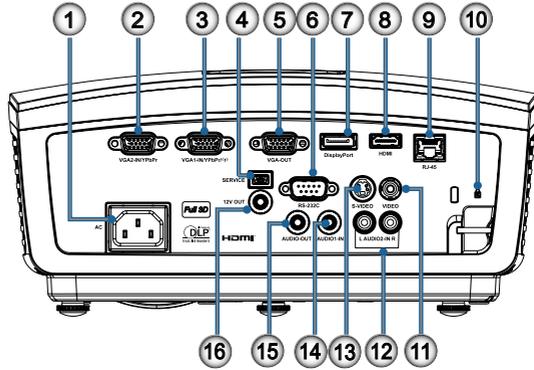

1. Power Socket
2. VGA2-IN/YPbPr
3. VGA1-IN/YPbPr/((r))
4. SERVICE
5. VGA-OUT
6. RS-232C
7. DisplayPort
8. HDMI
9. RJ-45
10. Kensington Microsaver™ Lock Port
11. VIDEO
12. AUDIO2-IN (L and R)
13. S-Video
14. AUDIO1 IN
15. AUDIO OUT
16. 12V OUT

Remote Control



CAUTION


Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure.

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.



Due to generic remote, function is model dependent.

1. Power On
2. Test Pattern
3. Function 1 (Assignable)
4. Display mode / Mouse Left Key
5. Four Directional Select Keys
6. Enter
7. Information Panel
8. Source
9. Volume +/-
10. Format (Aspect Ratio)
11. Zoom
12. VGA1/1 (Number Button for password input)
13. VGA2/4
14. BNC/7
15. S-Video/2
16. Video/5
17. YPbPr/8
18. Power Off
19. Mouse Switch
20. Function 2 (Assignable)
21. AV Mute / Mouse Right Key
22. Laser (**DO NOT POINT IN EYES**)
23. Re-Sync
24. V Keystone +/-
25. Menu
26. Remote code All
27. HDMI2
28. HDMI1/3
29. DVI/6
30. 3D/0
31. DisplayPort/9
32. Remote code 01~99

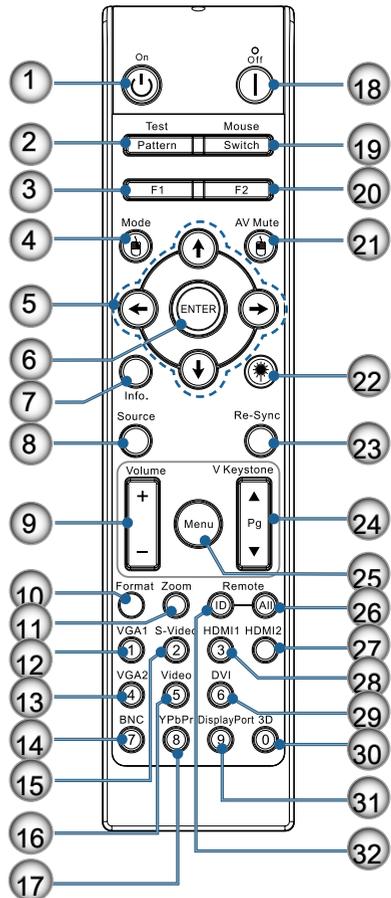


Installation

Connecting the Projector

Connect to Notebook

Note


Due to the difference in applications for each country, some regions may have different accessories.

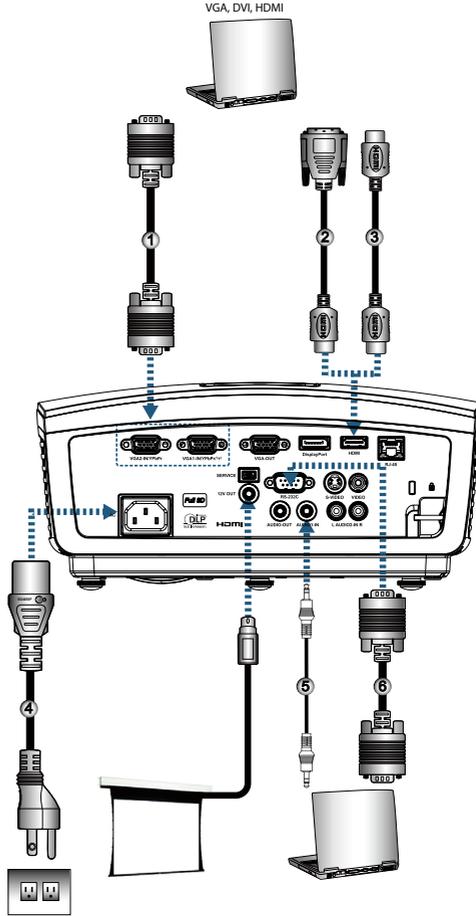

- 1..... VGA Input Cable
- 2..... DVI/HDMI Cable (Optional Accessory)
- 3..... HDMI Cable (Optional Accessory)
- 4..... Power Cord
- 5..... Audio Cable (Optional Accessory)
- 6..... RS232 Cable (Optional Accessory)

Installation

Connect to Video Sources

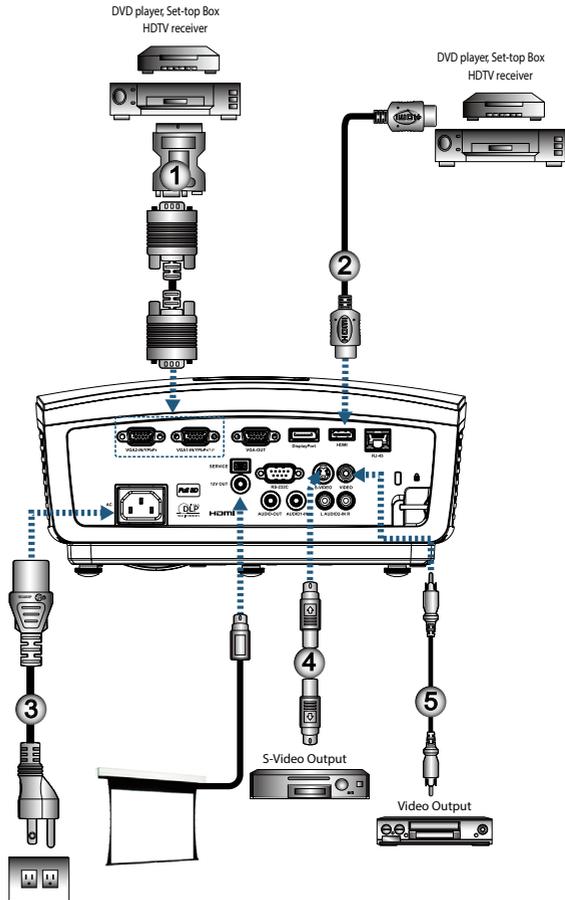

Note

Due to the difference in applications for each country, some regions may have different accessories.

Note

12V OUT is a programmable trigger.

- 1.....SCART RGB/S-Video Adapter (Optional Accessory)
- 2.....HDMI Cable (Optional Accessory)
- 3.....Power Cord
- 4.....S-Video Cable (Optional Accessory)
- 5.....Composite Video Cable (Optional Accessory)

Powering On/Off the Projector

Powering On the Projector

1. Remove the lens cover.
2. Connect the power cord to the projector.
3. Turn On the connected devices.
4. Ensure the Power LED is flashing and then press the power button to turn On the projector.

Note

Turn on the projector first and then select the signal sources.

The projector's startup logo screen displays and connected devices are detected. If the connected device is a laptop, press the appropriate keys on the computer keyboard to switch the display output to the projector. (Check the user manual of the laptop to determine the appropriate Fn key combination to change display output.)

See Security Settings on page 40 if security lock is enabled.

Note

Due to the difference in applications for each country, some regions may have different accessories.



Note

12V OUT is a programmable trigger.

5. If more than one input device is connected, press the "Source" button sequentially to switch between devices. For direct source selection, see page 20.



Powering Off the Projector

1. Press the "⏻" button on the remote control or "POWER" button on the panel of the projector to turn off the projector. First push of button will display the following message on the screen.



Press the button again to confirm the shut down. If the button is not pressed, the message will disappear in 5 seconds.

2. The Power LED flashes green (1 sec on, 1sec off) and the fans will speed up during shut down cooling cycle. The projector reaches stand-by mode as soon as the Power LED flashes green (2 sec on, 2 sec off).

If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press "POWER" button on the rear of the projector or "⏻" on the remote control to restart the projector.

3. Disconnect the power cord from the electrical outlet and the projector only when the projector is in stand-by mode.

Warning Indicator

Note

Contact the nearest service center if the projector displays these symptoms. See page 104 for more information.

- When the Lamp LED indicator lights red, the projector will automatically shut itself down. Please contact your local reseller or service center. See page 70.
- When the Temp LED is on a steady (not flashing) red, the projector will automatically shut itself down. Under normal conditions, the projector can be switched on again after it has cooled down. If the problem persists, you should contact your local dealer or our service center. See page 70.

Installation

Adjusting the Projected Image


Adjusting the Projector's Height

The projector is equipped with tilt-adjuster feet for adjusting the image height.

Note

- The projector table or stand should be level and sturdy.
- Position the projector so that it is perpendicular to the screen.
- For personal safety, please secure the cables properly.

To adjust the angle of the picture, turn the tilt-adjuster right or left until the desired angle has been achieved.

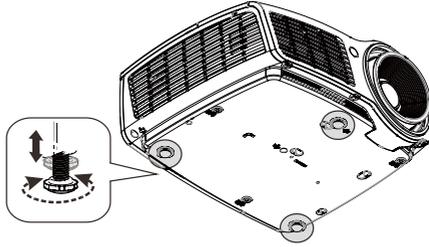


Adjusting the vertical image position

The Lens Shift function can be used to adjust the position of the vertically.


Lens shift adjustment for WXGA

The display position can be shifted upward up to 7% and down to 4.5% elevation of the display.

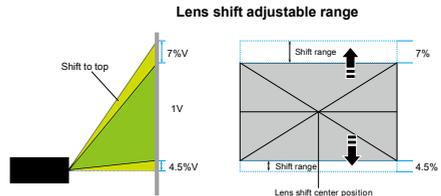


Lens shift adjustment for 1080P

The display position can be shifted upward up to 9% and down to 5% elevation of the display.

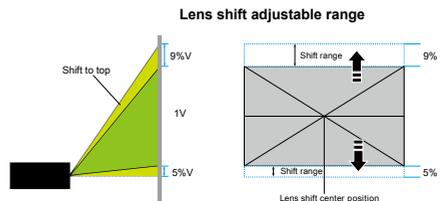

Installation

Adjusting Projection Image Size (WXGA)

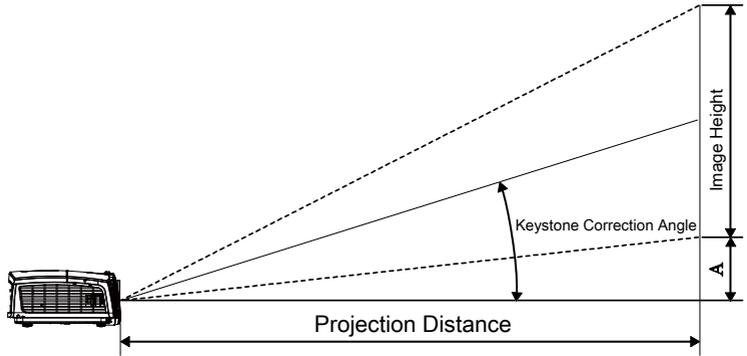


Diagonal length (inch) size of 16:10 Screen	Screen Size W X H (16:10)				Projection distance (D)				Offset (A)	
	(m)		(feet)		(m)		(feet)		(m)	(feet)
	Width	Height	Width	Height	wide	tele	wide	tele		
30	0.65	0.40	2.12	1.32	0.94	1.42	3.10	4.66	0.05	0.15
40	0.86	0.54	2.83	1.77	1.26	1.90	4.13	6.22	0.06	0.20
60	1.29	0.81	4.24	2.65	1.89	2.84	6.19	9.33	0.09	0.30
80	1.72	1.08	5.65	3.53	2.52	3.79	8.25	12.44	0.12	0.41
100	2.15	1.35	7.07	4.42	3.14	4.74	10.32	15.55	0.15	0.51
120	2.58	1.62	8.48	5.30	3.77	5.69	12.38	18.66	0.19	0.61
140	3.02	1.88	9.89	6.18	4.40	6.63	14.44	21.77	0.22	0.71
160	3.45	2.15	11.31	7.07	5.03	7.58	16.51	24.87	0.25	0.81
190	4.09	2.56	13.43	8.39	5.97	9.00	19.60	29.54	0.29	0.97
230	4.95	3.10	16.25	10.16	7.23	10.90	23.73	35.76	0.36	1.17
280	6.03	3.77	19.79	12.37	8.81	13.27	28.89	43.53	0.43	1.42
300	6.46	4.04	21.20	13.25	9.43	14.22	30.95	46.64	0.46	1.52



300" (overdrive)
for Asia.

Installation


Adjusting Projection Image Size (1080p)

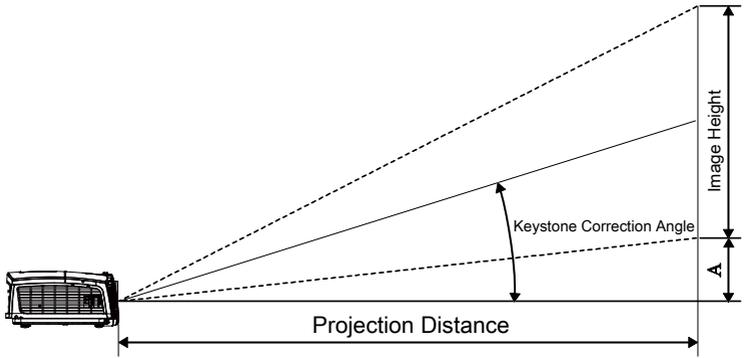

Diagonal length (inch) size of 16:9 Screen	Screen Size W X H (16:9)				Projection distance (D)				Offset (A)	
	(m)		(feet)		(m)		(feet)		(m)	(feet)
	Width	Height	Width	Height	wide	tele	wide	tele		
30	0.66	0.37	2.18	1.23	0.92	1.39	3.03	4.55	0.06	0.18
40	0.89	0.50	2.91	1.63	1.23	1.85	4.04	6.07	0.07	0.25
60	1.33	0.75	4.36	2.45	1.85	2.78	6.06	9.11	0.11	0.37
80	1.77	1.00	5.81	3.27	2.46	3.70	8.08	12.14	0.15	0.49
100	2.21	1.25	7.26	4.09	3.08	4.63	10.10	15.18	0.19	0.61
120	2.66	1.49	8.72	4.90	3.69	5.55	12.11	18.22	0.22	0.74
140	3.10	1.74	10.17	5.72	4.31	6.48	14.13	21.25	0.26	0.86
160	3.54	1.99	11.62	6.54	4.92	7.40	16.15	24.29	0.30	0.98
190	4.21	2.37	13.80	7.76	5.85	8.79	19.18	28.84	0.35	1.16
230	5.09	2.86	16.71	9.40	7.08	10.64	23.22	34.91	0.43	1.41
280	6.20	3.49	20.34	11.44	8.62	12.96	28.27	42.50	0.52	1.72
300	6.64	3.74	21.79	12.26	9.23	13.88	30.29	45.54	0.56	1.84

User Controls

Remote Control

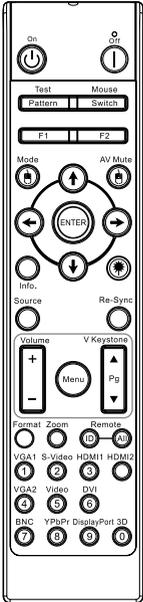

Note

Due to the difference in applications for each country, some regions may have different accessories.


Note

Due to generic remote, function is model dependent.

Using the Remote Control

Power On/Off	Refer to the "Powering Off the Projector" on page 15. Refer to the "Powering On the Projector" on page 14.
Test Pattern	Refer to the "Test Pattern" on page 49.
Mouse Switch	When connecting your PC to the projector through USB, press "Mouse Switch" to activate/ inactivate the mouse mode and control your PC using the remote.
Function 1 (F1)	Refer to the "Function 1" on page 52.
Function 2 (F2)	Refer to the "Function 2" on page 52.
Mode ()	Mode - Refer to the "Display Mode" on page 28.  - In the mouse mode, use  as emulation of USB mouse left click via USB.
AV Mute ()	AV Mute - Momentarily turns off/on the audio and video.  - In the mouse mode, use  as emulation of USB mouse right click via USB.
Four Directional Select Keys	<ol style="list-style-type: none"> Use     to select items or make adjustments to your selection. In the mouse mode, use     as emulation of directional keys.
Enter	<ol style="list-style-type: none"> Confirm your item selection. In the mouse mode, as emulation keyboard enter key.
Info.	Refer to the "Information" on page 50.
Laser 	Press  to operate the on-screen pointer. DO NOT POINT IN EYES.
Source	Press "Source" to search for source.
Re-Sync	Automatically synchronize the projector to the input source.
Menu	Press "Menu" to launch the on-screen display (OSD) menu. To exit OSD, press "Menu" again.

User Controls

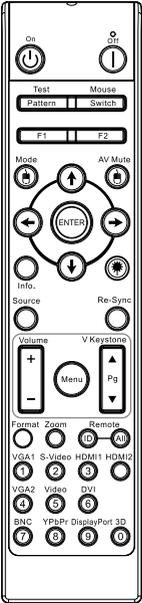

Note

Due to the difference in applications for each country, some regions may have different accessories.

Note

Due to generic remote, function is model dependent.

Using the Remote Control

Volume +/- Press “Volume +/-” to adjust volume.

V Keystone +/- Adjusts image distortion caused by tilting the projector. (± 30 degrees)

Format Refer to the “Format” on page 34.

Zoom Press “Zoom” to zoom out images.

Remote ID Press until Power LED is flashing then press 01~99 to set the particular remote code.

Remote All Press to set remote code to all.

VGA1 Press “VGA1” to choose source from VGA- IN connector.

S-Video Press “S-Video” to choose S-Video source.

HDMI Press “HDMI” to choose HDMI source.

Re-sync Automatically synchronizes the projector to the input source.

VGA2 Press “VGA2” to choose source from VGA- IN connector.

Video Press “Video” to choose Composite video source.

DVI Press “DVI” to choose source from DVI-D connector.

BNC Press “BNC” to choose BNC source.

YPbPr Press “YPbPr” to choose YPbPr source.

DisplayPort Press “DisplayPort” to choose DisplayPort source.

3D Press “3D” to turn on/off 3D menu.

User Controls

Note

The remote control number must match the projector number for accurate control;

To set the Remote Control Number: Press 'Remote ID' until the LED above the Power Off button in the top-right of the remote control starts to flash, then input the desired remote control number (between 01-99) while the light is flashing. The LED will flash quickly three times to indicate a successful change. Press 'Remote All' until the LED flashes quickly 3 times to reset the remote control number back to 'All'.

A remote control set to 'All' can be used to control any projector – regardless of whether the projector has a set number or not.


User Controls

On-screen Display Menus

The Projector has multilingual On-screen Display menus that allow you to make image adjustments and change a variety of settings. The projector will automatically detect the source.

How to operate

1. To open the OSD menu, press “Menu” on the Remote Control or Control Panel.
2. When OSD is displayed, use ◀▶ keys to select any item in the main menu. While making a selection on a particular page, press ▲▼ or “ENTER” key on the Remote Control or “Enter” on the Control Panel to enter sub menu.
3. Use ▲▼ keys to select the desired item and adjust the settings by ◀▶ key.
4. Select the next item to be adjusted in the sub menu and adjust as described above.
5. Press “ENTER” key on the Remote Control or “Enter” on the Control Panel or “Menu” to confirm, and the screen will return to the main menu.
6. To exit, press “Menu” again. The OSD menu will close and the projector will automatically save the new settings.

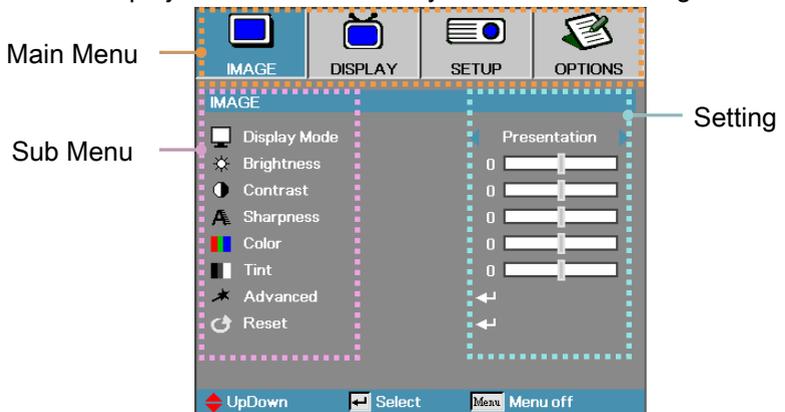

User Controls

Menu Tree

Main menu	Sub menu	Advanced menu	Settings	
Image	Display Mode		Presentation / Bright / Movie / sRGB / Blackboard / DICOM SIM. / User / 3D	
	Brightness		-50~50	
	Contrast		-50~50	
	Sharpness		1~15	
	#Color		-50~50	
	#Tint		-50~50	
	Advanced	Noise Reduction		
		BrilliantColor™	1 to 10	
		Gamma	Film / Video / Graphics / Standard	
		Color Temp.	Warm / Standard / Cool / Cold	
		Color Space	Not HDMI Input: Auto / RGB / YUV HDMI Input: Auto/ RGB(0~255) / RGB(16~235) / YUV	
		Color Matching	Red :Hue / Saturation / Gain[-50~50] Green:Hue / Saturation / Gain[-50~50] Blue:Hue / Saturation / Gain[-50~50] Cyan:Hue / Saturation / Gain[-50~50] Magenta:Hue / Saturation / Gain[-50~50] Yellow:Hue / Saturation / Gain[-50~50] White:Red / Green / Blue [-50~50] Reset Exit	
		Signal	Automatic Phase (VGA) Frequency (VGA) H. Position (VGA) V. Position (VGA) Exit	
		Exit		
		Reset		Yes / No

User Controls

Main menu	Sub menu	Advanced menu	Settings		
Display	Format		WXGA		
			4:3, 16:9 or 16:10, Native, Auto		
			1080P		
			4:3, 16:9, LBX , Native, Auto		
		Zoom		-5~25	
		Edge Mask		0~10	
		Image Shift	H		-100~+100
			V		-100 ~ +100
		V Keystone		-40 ~ +40	
		*3D	3D Mode		DLP-Link / IR
			3D→2D		3D / L / R
			3D Format		Auto / SBS / Top and Bottom / Frame Sequential
3D Sync Invert			On / Off		
Exit					
Setup	Language		English / Deutsch / Français / Italiano / Español / Português / Svenska / Nederlands / Norsk / Dansk / Polski / Русский / Suomi / ελληνικά / Magyar / Čeština / العربية / 繁體中文 / 簡體中文 / 日本語 / 한국어 / ไทย / Türkçe / ىسراف / Việt / Romanian / Bahasa Indonesian		
		Projection	P 9 d b		
		Menu Location	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>		
		Screen Type		16:10 / 16:9 (WXGA)	
		Security	Security Setting		On / Off
			Security Timer		Month / Day / Hour / Exit
			Change Password		
			Exit		
Projector ID			00~99		

User Controls

Main menu	Sub menu	Advanced menu	Settings	
	Audio Settings	Internal Speaker	On / Off	
		Mute	On / Off	
		Volume	0~10	
		Audio Input	Default / Audio1 / Audio2	
		Exit		
	Advanced	Logo	Optoma / Neutral / User	
		Logo Capture		
		Closed Captioning	Off / CC1 / CC2	
		Exit		
	Network	LAN Settings	Network Status	
			DHCP	
			IP Address	
			Subnet Mask	
			Gateway	
			DNS	
Apply				
MAC Address				
Exit				
Control Settings		Crestron		
		Extron		
		PJ Link		
		AMX Device Discovery		
		Telnet		
	Exit			

User Controls

Main menu	Sub menu	Advanced menu	Settings	
Options	Input Source		VGA1 / VGA2 / Video / S-Video / HDMI / DisplayPort / Exit	
	Source Lock		On / Off	
	High Altitude		On / Off	
	Information Hide		On / Off	
	Keypad Lock		On / Off	
	Test Pattern		None / Grid / White	
	Background Color		Blue / Black / Red / Green / White	
	Remote Settings	Function 1		Brightness
				Contrast
				Color Matching
				Color Temp.
				Gamma
		Function 2		Source Lock
				Projection
		Lamp Settings		
		Mute		
		Zoom		
	IR Function	On / Off		
	Remote Code	All~99		
	Exit			
	12V Trigge	On / Off / Auto 3D		

User Controls

Main menu	Sub menu	Advanced menu	Settings
	Advanced	Direct Power On	On / Off
		Signal Power On	On / Off
		Auto Power Off (min.)	
		Sleep Timer (min.)	
		Quick Resume	On / Off
		Power Mode (Standby)	Active / ECO
		OSD Time-Out	5 sec. / 15 sec. / 30 sec. / 60 sec. / Never
		Exit	
	Lamp Settings	Lamp Hour	
		Lamp Reminder	On / Off**
		Brightness Mode	Bright / Eco.
		DynamicBlack	On / Off
		Lamp Reset	Yes / No
	Exit		
	Information		
Reset		Current / All	


Note

- (#) "Color" and "Tint" is only supported in for YUV video sources.
- (*) "3D" is only available when a compatible signal is supplied.

Note

- (**)When DynamicBlack is On, and Brightness Mode is set to Bright, the Dynamic range is 100%~30%. When brightness mode is on Eco. Mode, the dynamic range is 80%~30%

User Controls

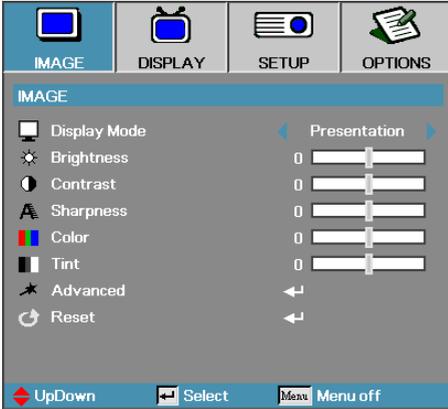

Image

Display Mode

There are many factory presets optimized for various types of images.

- ▶ Presentation: Good color and brightness from PC input.
- ▶ Bright: Maximum brightness from PC input.
- ▶ Movie: For home theater.
- ▶ sRGB: Standardised accurate color.
- ▶ Blackboard: This mode should be selected to achieve optimum color settings when projecting onto a blackboard (green).
- ▶ DICOM SIM: This display mode simulates the grayscale/gamma performance of equipment used for "Digital Imaging and Communications in Medicine" (DICOM).

Important: This mode should NEVER be used for medical diagnosis, it is for education/training purposes only.

- ▶ User: User's own settings.
- ▶ 3D: User adjustable setting for 3D viewing.

Brightness

Adjust the brightness of the image.

- ▶ Press ◀ to darken image.
- ▶ Press ▶ to lighten the image.

User Controls

Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture.

- ▶ Press ◀ to decrease the contrast.
- ▶ Press ▶ to increase the contrast.

Sharpness

Adjusts the sharpness of the image.

- ▶ Press ◀ to decrease the sharpness.
- ▶ Press ▶ to increase the sharpness.

Color

Adjusts a video image from black and white to full color saturation.

- ▶ Press ◀ to decrease the amount of color in the image.
- ▶ Press ▶ to increase the amount of color in the image.

Tint

Adjusts the color balance of red and green.

- ▶ Press ◀ to increase the amount of green in the image.
- ▶ Press ▶ to increase the amount of red in the image.

Advanced

Enter the Advanced menu. Select advanced display options such as Noise Reduction, BrilliantColor™, Gamma, Color Temp., Color Space, Color Matching, Signal, and Exit. See page 30 for more information.

User Controls

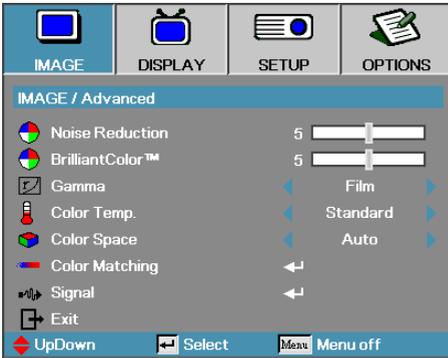


Image / Advanced

Noise Reduction

The motion Adaptive Noise Reduction reduces the amount of visible noise in interlaced signals. The range is from “0” to “10”. (0=Off)

BrilliantColor™

This adjustable item utilizes a new color-processing algorithm and system level enhancements to enable higher brightness while providing true, more vibrant colors in picture. The range is from 1 to 10. If you prefer a stronger enhanced image, adjust toward the maximum setting. For a smoother, more natural image, adjust toward the minimum setting.

Gamma

Choose the Gamma type from Film, Video, Standard.

Color Temp

Adjust the color temperature. Cold temperature, the screen looks colder; with Warm temperature, the screen looks warmer.

Color Space

Select an appropriate color matrix type from AUTO, RGB, YUV.

- ▶ For HDMI only: Select color matrix from Auto, RGB (0-255), RGB (16-235), YUV.

User Controls

Color Matching

Enter the Color Matching menu. See page 32 for more details.

Signal

Enter the Signal menu. Set projector signal properties. The function is available when input source is support VGA 1/ VGA 2. See page 33 for more information.

User Controls


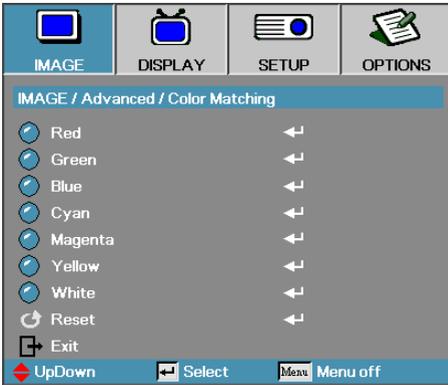


Image / Advanced / Color Matching

Colors (Except White)

Press ▲▼ to select a color and press “ENTER” to adjust the hue, saturation, and gain settings.

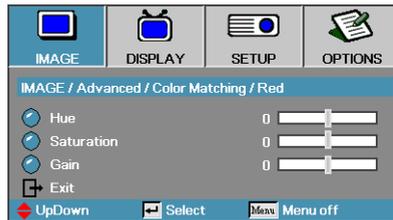


Note

- Green, Blue, Cyan, Yellow, Magenta can be separate adjust by each color HSG.
- White can be adjust Red, Green, Blue color by each.

Press ▲▼ to select Hue, Saturation, or Gain and press ◀▶ to adjust the settings.

White

Press ▲▼ to select White and press “ENTER”.

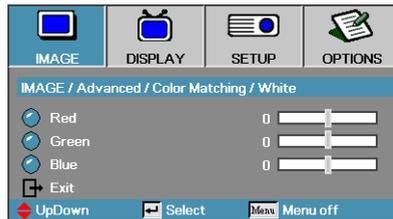

Press ▲▼ to select Red, Green, or Blue and press ◀▶ to adjust the settings.

Reset

Reset all Color Setting values to the factory default.

User Controls

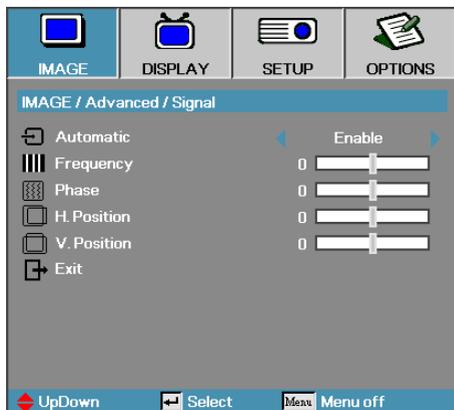


Image / Advanced / Signal

Automatic

Set Automatic to On or Off to lock or unlock the Phase and Frequency features.

- ▶ Disable—Off auto lock.
- ▶ Enable—On auto lock.

Frequency

Change the display data frequency to match the frequency of your computer's graphics card. If you experience a vertical flickering bar, use this function to make an adjustment.

Phase

Phase synchronizes the signal timing of the display with the graphics card. If you experience an unstable or flickering image, use this function to correct it.

H. Position

- ▶ Press ◀ to move the image left.
- ▶ Press ▶ to move the image right.

V. Position

- ▶ Press ◀ to move the image down.
- ▶ Press ▶ to move the image up.

User Controls




Display

Format

Use this function to choose your desired aspect ratio.

- ▶ 4:3: This format is for 4x3 input sources not enhanced for Wide screen TV.
- ▶ 16:9/16:10: This format is for 16x9 input sources, like HDTV and DVD enhanced for Wide screen TV.
- ▶ LBX: This format is for non-16x9, letterbox source and for users who use an external 16x9 lens to display 2.35:1 aspect ratio using full resolution.
- ▶ Native: Depends on the resolution of the input source – No scaling is performed.
- ▶ Auto: Automatically selects the appropriate format.

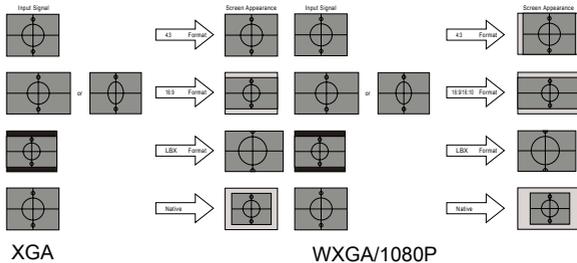

User Controls

Zoom

- ▶ Press ◀ to reduce the size of the image.
- ▶ Press ▶ to magnify an image on the projected screen.

Edge Mask

Edge Mask function removes the noise in a video image. Edge Mask the image to remove video encoding noise on the edge of video source.

H Image Shift

Shifts the projected image position horizontally.

- ▶ Press ◀ to move the image left on the projected screen.
- ▶ Press ▶ to move the image right on the projected screen.

V Image Shift

Shifts the projected image position vertically.

- ▶ Press ▶ to move the image up on the projected screen.
- ▶ Press ◀ to move the image down on the projected screen.


V Keystone

Press ◀ or ▶ to compensate for vertical images distortion when the projector is positioned at an angle to the screen.

3D

Enter the 3D menu. Select 3D options such as 3D Mode, 3D->2D, 3D Format, and 3D Sync Invert. See page 36 for more information.

User Controls

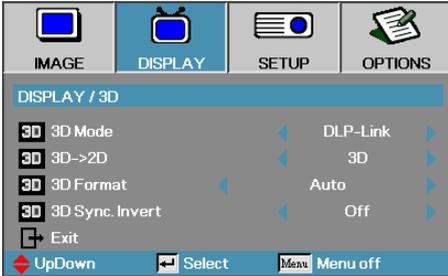

Display | 3D

3D Mode

- ▶ DLP Link: Select DLP Link to use optimized settings for DLP Link 3D Glasses.
- ▶ IR: Select IR to use optimized settings for IR-based 3D images.

3D→2D

Press ◀ or ▶ to select projector display 3D content in 2D (Left) or 2D(Right) without using 3D glasses to enjoy 3D content. This setting can also be used for dual projector passive 3D installations.

3D Format

- ▶ Auto: When a 3D identification signal is detected, the 3D format is selected automatically. (For HDMI 1.4 3D sources only)
- ▶ SBS: Display 3D signal in Side-by-Side format.
- ▶ Top and Bottom: Display 3D signal in Top and Bottom format.
- ▶ Frame Sequential: Display 3D signal in Frame Sequential format.

3D Sync. Invert

Press ◀ or ▶ to enable or disable the 3D Sync invert function to invert images.



3D settings would be saved after adjustment.

Setup



Language

Enter the Language menu. Select the multilingual OSD menu.

See page 39 for more information.

Projection

Select projection method:

- ▶ **P** Front Desktop

The factory default setting.

- ▶ **R** Rear Desktop

When you select this function, the projector reverses the image so you can project from behind a translucent screen.

- ▶ **d** Front Ceiling

When you select this function, the projector turns the image upside down for ceiling-mounted projection.

- ▶ **b** Rear Ceiling

When you select this function, the projector reverses and turns the image upside down at same time. You can project from behind a translucent screen with ceiling mounted projection.

User Controls

Menu Location

Choose the menu location on the display screen.

Screen Type

Press ◀▶ to set the aspect ratio to 16:9 or 16:10. This function is only available for WXGA.

Security

Enter the Security menu. Access the projector's security features.

See pages 40-42 for more information.

Projector ID

Select a two digit projector ID from 00 through 99.

Audio Settings

Enter the Audio menu. Set audio level properties. See page 43 for more information.

Advanced

Enter the Advanced menu. Select the screen display during startup. See page 44 for more information.

Network

Allows access to controls for web, PJ-Link, and IP commands. See page 45 for more information.

User Controls



Setup / Language

Language

Choose the multilingual OSD menu. Press “ENTER” into the sub menu and then use the Left (◀) or Right (▶) key to select your preferred language.

User Controls



Setup / Security

Security Setting

Enable or disable the security password.

- ▶ On—the current password is required to power on the projector and access the Security menu.
- ▶ Off—no password is required after system power up.



The default password: 1, 2, 3, 4, 5.

When security is enabled, the following screen displays at startup and before access to the Security menu is allowed:



User Controls

Security Timer

Enter the Security Timer sub menu.



Enter the Months, Days, and hours that the projector can be used without entering the password. Exiting to the Setup menu activates the Security Timer.

Once activated, the projector requires a password on the specified dates and times to allow power on and access to the security menu.

If the projector is in use and the Security Timer is active, the following screen displays 60 seconds before the password is required.



User Controls

Change Password

Use this submenu to change the security password for the projector.


1. Select Change Password from the Security submenu.
The Confirm Change Password dialog box displays.
2. Select Yes.

Note

If the incorrect password is entered three times, the device auto shutdowns after 10 seconds.



3. Enter the default password <1> <2> <3> <4> <5>.
A second password screen displays.

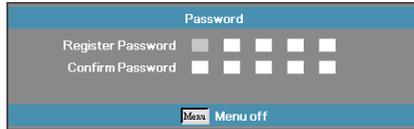

4. Enter the new password twice for verification.

Note

If the new passwords do not match, the password screen redisplay.



Setup / Audio Settings

Internal Speaker

- ▶ Off—turn off the internal speaker.
- ▶ On—turn on the internal speaker.

Mute

Toggle the audio on or off.

- ▶ Off—the speaker volume and audio out are turned on.
- ▶ On—the speaker volume and audio out are turned off.

Volume

Press ◀ to decrease the volume.

Press ▶ to increase the volume.

Audio Input

Press ◀▶ to select audio source input.

User Controls



Setup / Advanced

Logo

Select the screen to display during startup.


- ▶ Optoma—the supplied default startup screen.
- ▶ Neutral—is Background Color.
- ▶ User—customized screen capture using the Logo Capture function.

Logo Capture

Capture a displayed screen to use as the startup screen.

1. Display the desired screen on the projector.
2. Select Logo Capture from the Advanced menu.

A confirmation screen displays.

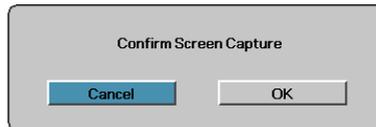

3. Select OK. Screen capture in progress will display.
When finished, Screen capture Succeeded will display.
The captured screen is saved as User in the logo menu.

Closed Captioning


Select the screen to display closed captioning

- ▶ Off—the supplied default setting.
- ▶ CC1/CC2—closed captioning type select.



Only one startup screen can be saved at once. Subsequent captures overwrite previous files limited in 1920 x 1200 (Refer Appendices Timing Table)

User Controls

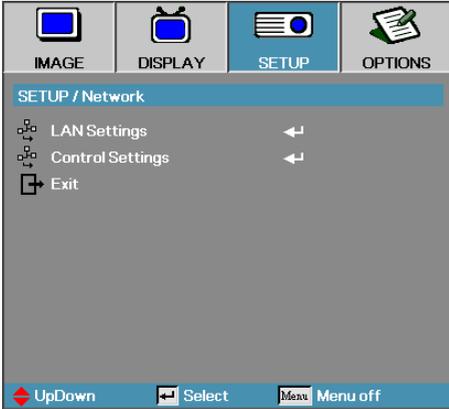

Setup / Network


LAN Settings

Enter the LAN Settings menu. See page 46 for more information.

Control Settings

Enter the Control Settings menu. See page 47 for more information.

User Controls

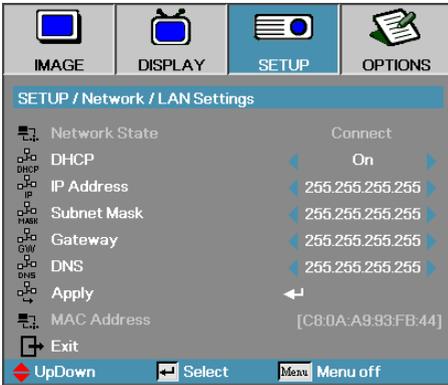

Setup / LAN Settings

If the connection is successful, the OSD display will show the following dialogue box.

- ▶ Network State—to display network information.
- ▶ DHCP:

On: Assign an IP address to the projector from the DHCP server automatically.

Off: Assign an IP address manually.

- ▶ IP Address—Select an IP address
- ▶ Subnet Mask—Select subnet mask number.
- ▶ Gateway—Select the default gateway of the network connected to the projector.
- ▶ DNS—Select DNS number.
- ▶ Apply—Press “ENTER” to apply the selection.
- ▶ MAC Address—Read only.

Note

Network sub-menu can only be accessed if a network cable is connected.

User Controls



Setup / Control Settings

Crestron

Press ◀▶ to check to enable/disable Crestron.

Extron

Press ◀▶ to check to enable/disable Extron.

PJ Link

Press ◀▶ to check to enable/disable PJ Link.


AMX Device Discovery

Press ◀▶ to check to enable/disable AMX Device Discovery.

Telnet

Press ◀▶ to check to enable/disable Telnet.

User Controls

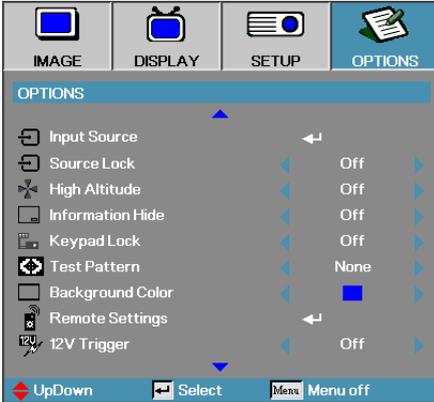

Options

Input Source

Enter the Input Source submenu. Select the sources to scan for at startup. See page 51 for more information.

Source Lock

Lock the current source as the only available source, even if the cable is unplugged.

- ▶ On—only the current source is recognized as an input source.
- ▶ Off—all sources selected in Options | Input Source are recognized as an input source.

High Altitude

Adjust the fan speed to reflect the environment.

- ▶ On—increases fan speed for high temperature, humidity, or altitude.
- ▶ Off—regular fan speed for normal conditions.

Information Hide

Suppress informational messages on the projected screen.

- ▶ On—no status messages appear on screen during operation.
- ▶ Off—status messages appear as normal on screen during operation.

User Controls

Keypad Lock

Lock the buttons on the projector top panel.

- ▶ On—a warning message displays to confirm keypad lock.



- ▶ Off—projector keypad functions as normal.

Test Pattern

Display a test pattern. There are Grid, White and None.

Background Color

Select the desired background color for the projected image when no source is detected.

Remote Settings

Enter the Remote settings. See page 52 for more information.


12V Trigger

Press ◀▶ to select 12V Trigger whether output or not.



Hold "ENTER" key on keypad for 10 seconds to unlock keypad

User Controls

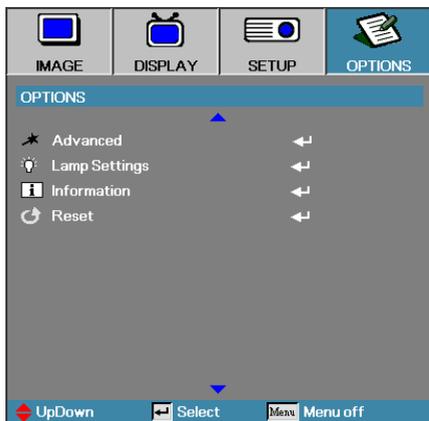

Advanced

Enter the Advanced menu. See pages 53-54 for more details.

Lamp Setting


Enter the Lamp Setting menu. See pages 55-56 for more details.

Information

Show the projector information.

Reset

Reset all Options to default factory settings.

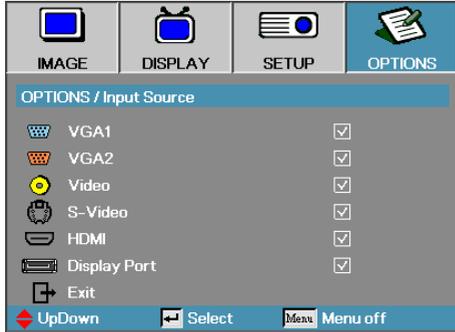

Options / Input Source


Input Source



If all sources are deselected, the projector cannot display any images. Always leave at least one source selected.

Use this option to enable / disable input sources. Press ▲ or ▼ to select a source, then press ◀ or ▶ to enable / disable it. Press “ENTER” to finalize the selection. The projector will not search inputs that are de-selected.

User Controls

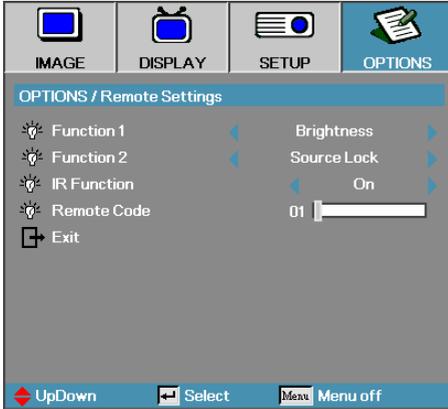

Options / Remote Settings

Function 1

Set F1 key as a hotkey for Brightness, Contrast, Color Matching, Color Temp. or Gamma function.

Function 2

Set F2 key as a hotkey for Source Lock, Projection, Lamp Settings, Mute, Zoom or Volume function.

IR Function

Enable or Disable projector's IR function.

Remote Code


Press ◀▶ to set Remote custom code and press "ENTER" to change to the setting.



The remote control number must match the projector number for accurate control;

To set the Remote Control Number: Press 'Remote ID' until the LED above the Power Off button in the top-right of the remote control starts to flash, then input the desired remote control number (between 01-99) while the light is flashing. The LED will flash quickly three times to indicate a successful change. Press 'Remote All' until the LED flashes quickly 3 times to reset the remote control number back to 'All'.

A remote control set to 'All' can be used to control any projector – regardless of whether the projector has a set number or not.

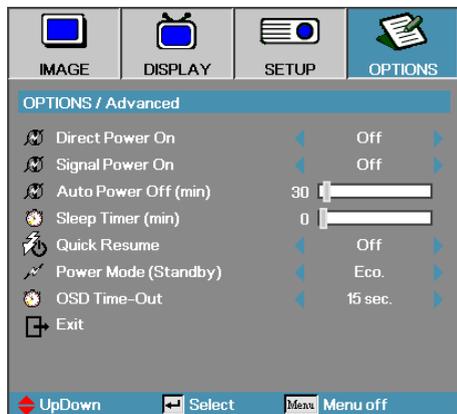

Options / Advanced

Direct Power On

Enable or disable Direct Power On.

- ▶ On—the projector powers on automatically when AC power is supplied.
- ▶ Off—the projector must be powered on as normal.

Signal Power On

Enable or disable Signal Power On.

- ▶ On—the projector powers on automatically when an active signal is detected.
- ▶ Off—disable the power on trigger by active signal is detected.



1. Only available on Standby Mode is Active.
2. If projector is turned off with keeping input the signal source (the last image source showing on screen), it will not re-start unless:
 - a. Terminate the last image source and input any signal source again.
 - b. Unplug and re-plug the projector power again.
3. Signal power on will ignore “source lock” setting.

User Controls

Auto Power Off (min)

Set the Auto Power Off interval. The projector powers off the lamp after 30 minutes of no signal by default. The following warning is displayed 60 seconds before power off.

The projector will automatically shutdown after 60 sec.

Sleep Timer (min)

Set the Sleep Timer interval. The projector powers off after the specified time period of inactivity (regardless of signal). The following warning is displayed 60 seconds before power off.

The projector will automatically shutdown after 60 sec.

Quick Resume

If Quick Resume is On, the projector can resume operating soon provided the projector is turned back on within 100 seconds of being turned off.



When Power Mode (Standby) is set to Eco, the VGA & Audio pass-through, RS232 and RJ45 will be deactivated when the projector is in standby.

Power Mode (Standby)

- ▶ Eco.: Choose “Eco.” to save power dissipation further < 0.5W.
- ▶ Active: Choose “Active” to return to normal standby and the VGA out port will be enabled.

OSD Time-Out

Set the OSD display time



Options / Lamp Setting

Lamp Hour

Displays the number of hours the lamp has been active. This item is for display only.

Lamp Reminder

Enable or disable the lamp life span reminder.

- ▶ On—a warning message displays when remaining lamp life is less than 30 hours.



- ▶ Off—no warning message displays.

Brightness Mode

Select the lamp brightness mode.

- ▶ Bright—the default setting.
- ▶ Eco.—lower brightness setting to conserve lamp life.

User Controls

DynamicBlack


Select the DynamicBlack mode.

Lamp Reset

After replacing the lamp, reset the lamp counter to accurately reflect the new lamp's life span.

1. Select Lamp Reset.

A confirmation screen displays.

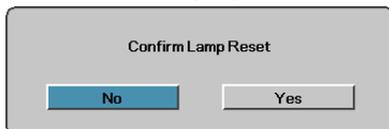

2. Select Yes to reset the lamp counter to zero.



When DynamicBlack is On, and Brightness Mode is set to Bright, the Dynamic range is 100%~30%. When brightness mode is on Eco. Mode, the dynamic range is 80%~30%.


LAN_RJ45

Note

- Projector connects to LAN, please use Ethernet Normal Cable.
- Peer-to-peer (PC connects to Projector directly), please use Ethernet Crossover Cable.

For simplicity and ease of operation, the Optoma projector provides diverse networking and remote management features.

The LAN/RJ45 function of the projector through a network, such as remotely manage: Power On/Off, Brightness and Contrast settings. Also, projector status information, such as: Video-Source, Sound-Mute, etc.

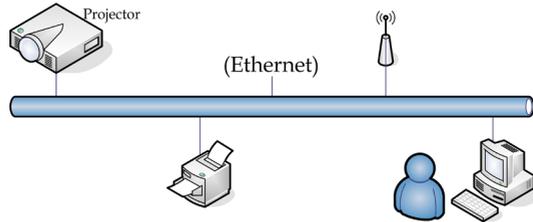

Wired LAN Terminal functionalities

The projector can be controlled by a PC (Laptop) or other external device via LAN/RJ45 port and compatible with Crestron / Extron / AMX (Device Discovery) / PJLink.

- ▶ Crestron is a registered trademark of Crestron Electronics, Inc. of the United States.
- ▶ Extron is a registered trademark of Extron Electronics, Inc. of the United States.
- ▶ AMX is a registered trademark of AMX LLC of the United States.
- ▶ PJLink applied for trademark and logo registration in Japan, the United States of America, and other countries by JBMIA.

Supported External Devices

This projector is supported by the specified commands of the Crestron Electronics controller and related software (ex, RoomView®).

<http://www.crestron.com/>

User Controls

This projector is compliant to support Extron device(s) for reference.

<http://www.extron.com/>

This projector is supported by AMX (Device Discovery).

<http://www.amx.com/>


This projector supports all commands of PJLink Class1 (Version 1.00).

<http://pjlink.jbmia.or.jp/english/>

For more detail of information about the diverse types of external devices which can be connected to the LAN/RJ45 port and remote/control the projector, as well as the related control commands supporting for each external device, kindly please get contact with the Support-Service directly.

LAN RJ45

1. Connect an RJ45 cable to RJ45 ports on the projector and the PC (Laptop).

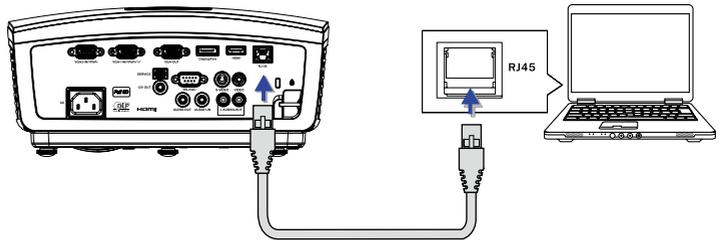

User Controls


2. On the PC (Laptop), select Start -> Control Panel-> Network Connections.



3. Right Click on your Local Area Connection, and select Property.




4. In the Properties window, select the General tab, and select Internet Protocol (TCP/IP).

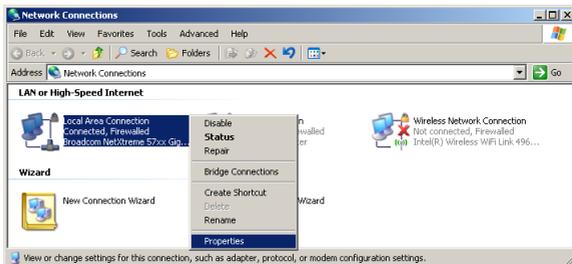


User Controls

5. Click Properties.

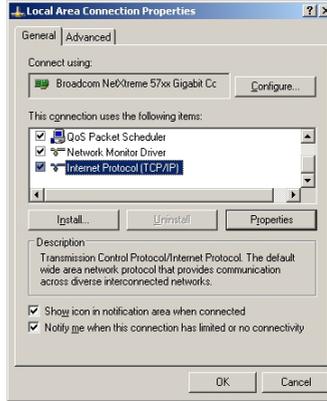

6. Fill in the IP address and Subnet mask, then press OK.

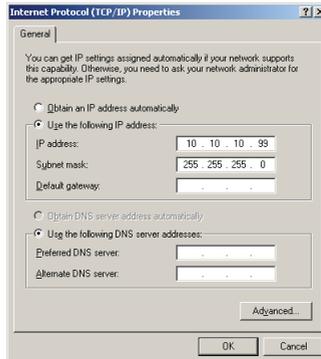

7. Press the Menu button on the projector.

8. Select OSD-> SETUP-> Network Settings-> Lan Settings.

9. After getting into Network Status, input the following:

- ▶ DHCP: Off
- ▶ IP Address: 10.10.10.10
- ▶ Subnet Mask: 255.255.255.0
- ▶ Gateway: 0.0.0.0
- ▶ DNS: 0.0.0.0


10. Press "ENTER" / ▶ to confirm settings.

User Controls



Note
For more information, please visit <http://www.crestron.com>

11. Open a web browser (ex, Microsoft Internet Explorer with Adobe Flash Player 9.0 or higher).

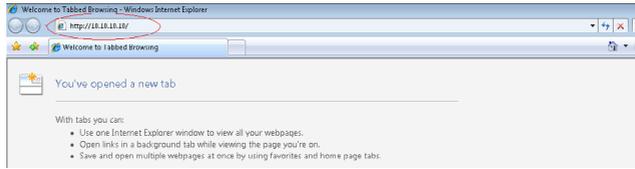

12. In the Address bar, input the IP address: 10.10.10.10.

13. Press “ENTER” / ►.

The projector is setup for remote management. The LAN/ RJ45 function displays as follows.



Admin > Information	
Information	Model Name
Alert Settings	System
Crestron	System Status: Power On
	Display Source: No Source
	Limit Hours: 0
	Image: Presentation
	Error Status: No Error
	LAN Status
	IP address: 10.10.10.10
	Subnet mask: 255.255.255.0
	Default gateway: 0.0.0.0
	DNS Server: 0.0.0.0
	MAC address:
	Version
	LAN Version:
	FW Version:

Crestron Copyright 2012 by Optoma Corp.



Expansion Options

User Controls

The screenshot shows a web-based configuration interface for a Crestron projector. It is divided into several sections:

- Crestron Control:** Fields for IP Address, IP ID, and Control Port, with a 'Control Set' button.
- Projector:** Fields for Projector Name (PJ01), Location (RM01), and Assigned To (Sir), with a 'Set' button.
- Network Config:** A 'DHCP Enabled' checkbox and fields for IP Address (10.10.10.10), Subnet Mask (255.255.255.0), Default Gateway (0.0.0.0), and DNS Server (0.0.0.0), with a 'Net Set' button.
- User Password:** A 'User Enabled' checkbox, fields for Password and Confirmed, and a 'User Set' button.
- Admin Password:** An 'Admin Enabled' checkbox, fields for Password and Confirmed, and an 'Admin Set' button.

A 'Tools Exit' button is located at the bottom center of the interface.

Category	Item	Input-Length
Crestron Control	IP Address	15
	IP ID	3
	Port	5
Projector	Projector Name	10
	Location	10
	Assigned To	10
Network Configuration	DHCP (Enabled)	(N/A)
	IP Address	15
	Subnet Mask	15
	Default Gateway	15
	DNS Server	15
User Password	Enabled	(N/A)
	New Password	10
	Confirm	10
Admin Password	Enabled	(N/A)
	New Password	10
	Confirm	10

For more information, please visit <http://www.crestron.com>.

Preparing Email Alerts

1. Make sure that user can access the homepage of LAN RJ45 function by web browser (for ex-ample, Microsoft Internet Explorer v6.01/v8.0).
2. From the Homepage of LAN/RJ45, click Alert Settings.



3. By default, these input boxes in Alert Settings are blank.



User Controls

4. For Sending alert mail, input the following:
 - ▶ The SMTP field is the mail server for sending out email (SMTP protocol). This is a required field.
 - ▶ The To field is the recipient's email address (for example, the projector administrator). This is a required field.
 - ▶ The Cc field sends a carbon copy of the alert to the specified email address. This is an optional field (for example, the projector administrator's assistant).
 - ▶ The From field is the sender's email address (for example, the projector administrator). This is a required field.
 - ▶ Select the alert conditions by checking the desired boxes.

Note

Fill in all fields as specified. User can click Send Test Mail to test what setting is correct. For successful sending an email alert, you must select alert conditions and enter a correct email address.

Optoma

Admin > Alert Settings

Information	SMTP Setting	Email Setting	Alert Condition
Alert Settings	Server Address: mail.comp.com	To: icv1@mail.comp.com	<input checked="" type="checkbox"/> Fan Error
Cestron	Server Port: 25	Cc: icv2@mail.comp.com	<input checked="" type="checkbox"/> Lamp Error
	User Name: Sender US	Subject: Projector Warning Information	<input checked="" type="checkbox"/> High Temp. Error
	Password: *****	From: send@mail.comp.com	<input type="button" value="Apply"/> <input type="button" value="Send Test Mail"/>
	<input type="button" value="Mail Server Apply"/>	<input type="button" value="Mail Address Apply"/>	

Copyright © 2013 by Optoma Corp.

RS232 by Telnet Function

Besides projector connected to RS232 interface with “Hyper-Terminal” communication by dedicated RS232 command control, there is alternative RS232 command control way, so called “RS232 by TELNET” for LAN/RJ45 interface.

User Controls

Quick Start-Guide for “RS232 by TELNET”


Check and get the IP-Address on OSD of the projector.

Make sure that laptop/PC can access the web-page of the projector.

Make sure that “Windows Firewall” setting to be disabled in case of “TELNET” function filtering out by laptop/PC.



1. Start => All Programs => Accessories => Command Prompt.

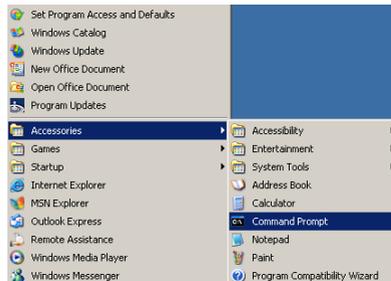

2. Input the command format like the below:
telnet ttt.xxx.yyy.zzz 23 (“Enter” key pressed)
(ttt.xxx.yyy.zzz: IP-Address of the projector)
3. If Telnet-Connection ready, and user can have RS232 command input, then “Enter” key pressed, the RS232 command will be workable.

User Controls


How to have TELNET enabled in Windows VISTA / 7

By default installation for Windows VISTA, “TELNET” function is not included. But end-user can have it by way of “Turn Windows features On or Off” to be enabled.


1. Open “Control Panel” in Windows VISTA.



2. Open “Programs”.

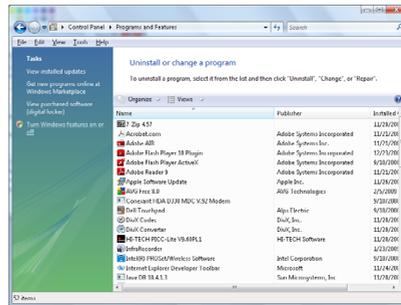


3. Select “Turn Windows features on or off” to open.

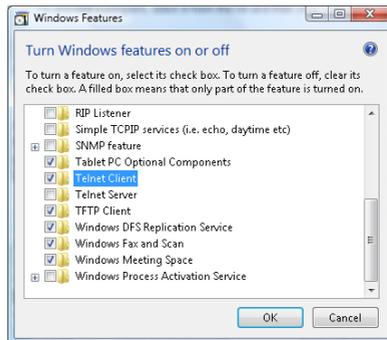

User Controls

4. Have “Telnet Client” option checked, then press “OK” button.

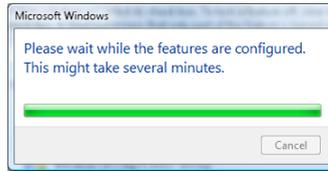

Specsheet for “RS232 by TELNET” :

1. Telnet: TCP.
2. Telnet port: 23 (for more detail, kindly please get contact with the service agent or team).
3. Telnet utility: Windows “TELNET.exe” (console mode).
4. Disconnection for RS232-by-Telnet control normally: Close Windows Telnet utility directly after TELNET connection ready.

Limitation 1 for Telnet-Control: there is less than 50 bytes for successive network payload for Telnet-Control application.

Limitation 2 for Telnet-Control: there is less than 26 bytes for one complete RS232 command for Telnet-Control.

Limitation 3 for Telnet-Control: Minimum delay for next RS232 command must be more than 200 (ms).

(* , In Windows XP built-in “TELNET.exe” utility, “Enter” key pressed will have “Carriage-Return” and “New-Line” code.)

Troubleshooting

If you experience a problem with your projector, please refer to the following information. If a problem persists, please contact your local reseller or service center.

Image

? No image appears on-screen

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
- ▶ Ensure the pins of connectors are not crooked or broken.
- ▶ Check if the projection lamp has been securely installed. Please refer to the “Replacing the Lamp” section.
- ▶ Make sure you have removed the lens cap and the projector is switched on.

? Image is out of focus

- ▶ Make sure the Lens cap is removed.
- ▶ Adjust the Focus Ring on the projector lens.
- ▶ Make sure the projection screen is between the required distance from the projector. See pages 17-18.

? The image is stretched when displaying 16:9 DVD title

- ▶ When you play anamorphic DVD or 16:9 DVD, the projector will show the best image in 16: 9 format on projector side.
- ▶ If you play the LBX format DVD title, please change the format as LBX in projector OSD.
- ▶ If you play 4:3 format DVD title, please change the format as 4:3 in projector OSD.
- ▶ If the image is still stretched, you will also need to adjust the aspect ratio by referring to the following:
- ▶ Please setup the display format as 16:9 (wide) aspect ratio type on your DVD player.

? Image is too small or too large

- ▶ Adjust the zoom lever from the lens.
 - ▶ Move the projector closer to or further from the screen.
 - ▶ Press [Menu] on the projector panel, go to “Display->Format”.
- Try the different settings.

? Image has slanted sides:

- ▶ If possible, reposition the projector so that it is centered on the screen and below the bottom of the screen and use PureShift to make adjustments to the image position.
- ▶ Use “Display->V Keystone” from the OSD to make an adjustment.

? Image is reversed

- ▶ Select “System->Projection” from the OSD and adjust the projection direction.

Other

? The projector stops responding to all controls

- ▶ If possible, turn off the projector, then unplug the power cord and wait at least 20 seconds before reconnecting power.

? Lamp burns out or makes a popping sound

- ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the “Replacing the Lamp” section on page 72.



Appendices

Projector LED Status Indicator

Message	Power LED  (Green)	Temp LED  (Red)	Lamp LED  (Red)
Standby State (Input power cord)	Slow Flashing 2 sec off 2 sec on	○	○
Power on (Warming)	Flashing 0.5 sec off 0.5 sec on	○	○
Power on & Lamp lighting		○	○
Power off (Cooling)	Flashing 1 sec off 1 sec on < 10 sec to off	○	○
Error (Lamp fail)	Flashing 0.5 sec off 0.5 sec on	○	
Error (Fan fail)	Flashing 0.5 sec off 0.5 sec on	Flashing 0.5 sec off 0.5 sec on	○
Error (Over Temp)	Flashing 0.5 sec off 0.5 sec on		○

Note

Steady light => 
No light => ○

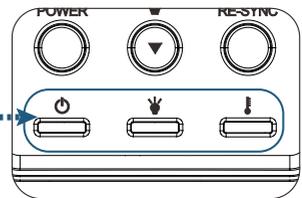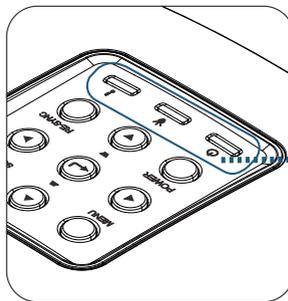

LED states

On Screen Messages

- ▶ Fan failed:
The projector will switch off automatically.
- ▶ Over temperature:
The projector will switch off automatically.
- ▶ Replacing the lamp:
Lamp is approaching the end of its rated life.
Replacement suggested.

 Lamp is approaching the end of its useful life



Warning:
Only use genuine
lamps.

Remote Control

If the remote control does not work

- ▶ Check the operating angle of the remote control is within $\pm 15^\circ$ both horizontally and vertically of one of the IR receivers on the projector.
- ▶ Make sure there are no any obstructions between the remote control and the projector. Move to within 7 m (23 ft) of the projector.
- ▶ Make sure batteries are inserted correctly.
- ▶ Replace batteries if they are exhausted.

Replacing the Lamp

The projector automatically detects the lamp life. When the lamp life is nearing the end of use, you will receive a warning message.



Lamp is approaching the end of its useful life




When you see this message, please contact your local reseller or service center to change the lamp as soon as possible. Make sure the projector has been cooled down for at least 30 minutes before changing the lamp.




Warning: Lamp compartment is hot! Allow it to cool down before changing lamp!



Warning: To reduce the risk of personal injury, do not drop the lamp module or touch the lamp bulb. The bulb may shatter and cause injury if it is dropped.

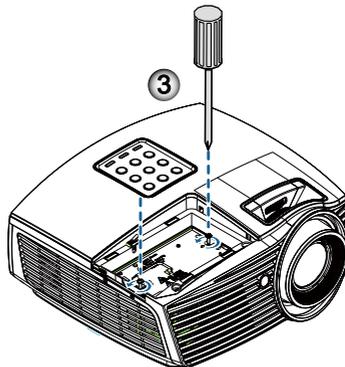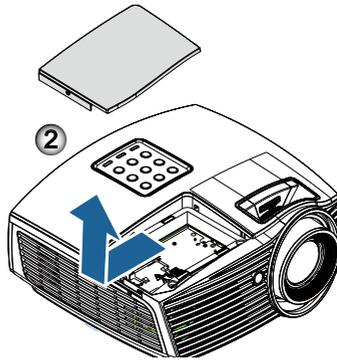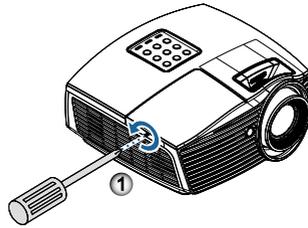

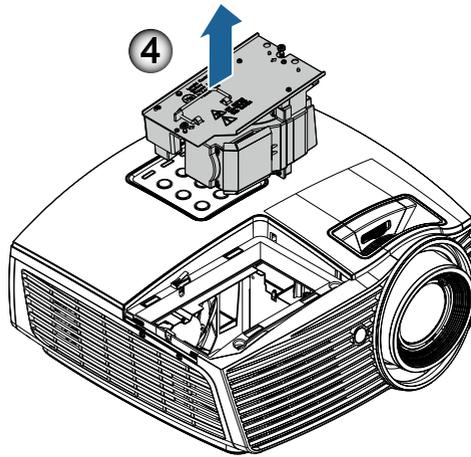

Lamp Replacing Procedure:

1. Switch off the power to the projector by pressing the Power button.
2. Allow the projector to cool down at least 30 minutes.
3. Disconnect the power cord.
4. Remove the single screw on the lamp compartment cover. ❶
5. Remove the lamp compartment cover. ❷
6. Remove the two screws from the lamp module. Lift the module handle up. ❸
7. Pull firmly on the module handle to remove the lamp module. ❹

To replace the lamp module, reverse the previous steps. While installing, align the lamp module with the connector and ensure it is level to avoid damage.

8. Turn on the projector and do "Lamp Reset" after the lamp module is replaced.

Lamp Reset: (i) Press "Menu" -> (ii) Select "Options" -> (iii) Select "Lamp Settings" -> (iv) Select "Lamp Reset" -> (v) Select "Yes".

Compatibility Modes

Video Compatibility

NTSC	NTSC M/J, 3.58MHz, 4.43MHz
PAL	PAL B/D/G/H/I/M/N, 4.43MHz
SECAM	SECAM B/D/G/K/K1/L, 4.25/4.4 MHz
SDTV	480i/p, 576i/p
HDTV	720p(50/60Hz), 1080i(50/60Hz), 1080P(50/60Hz)

Video Timing Detail Describe

Signal	Resolution	Refresh Rate(Hz)	Notes
TV(NTSC)	720 x 480	60	For Composite Video /S-video
TV(PAL, SECAM)	720 x 576	50	
SDTV (480I)	720 x 480	60	For Component
SDTV (480P)	720 x 480	60	
SDTV (576I)	720 x 576	50	
SDTV (576P)	720 x 576	50	
HDTV (720p)	1280 x 720	50/60	
HDTV (1080I)	1920 x 1080	50/60	
HDTV (1080p)	1920 x 1080	24/50/60	

Appendices

Computer Compatibility - VESA standards

Computer Signal (Analog RGB Compatible)

Signal	Resolution	Refresh Rate(Hz)	Notes
VGA	640 X 480	60/67/72/85	Mac 60/72/85/
SVGA	800 X 600	56/60 (*2)/72/ 85/120 (*2)	Mac 60/72/85
XGA	1024 X768	48/50(*4)/ 60 (*2)/70/75/ 85/120 (*2)	Mac 60/70/75/85
HDTV (720P)	1280 x 720	50/60 (*2)/ 120 (*2)	Mac 60
WXGA	1280 x 768	60/75/85	Mac 60/75/85
	1280 x 800	48/50(*4)60	Mac 60
WXGA(*3)	1366 x 768	60	
WXGA+	1440 x 900	60	Mac 60
SXGA	1280 x 1024	60/75/85	Mac 60/75
SXGA+	1400 x 1050	60	
UXGA	1600 x 1200	60	
HDTV (1080p)	1920 x 1080	24/50/60	Mac 60
WUXGA	1920 x 1200 (*1)	60	Mac 60

(*1) 1920 x 1200 @60Hz only support RB (reduced blanking).

(*2) 3D timing for True 3D projector.(Option)

(*3) Winow 8 standard timing

(*4) Native resolution must support @50hz

Input Signal for HDMI/DVI-D

Signal	Resolution	Refresh Rate(Hz)	Notes
VGA	640 x 480	60	Mac 60/72/85
SVGA	800 x 600	60(*2)/72/ 85/120(*2)	Mac 60/72/85
XGA	1024 x 768	48/50 60(*2)/70/75/ 85/120(*2)	Mac 60/70/75/85
SDTV (480i)	720 x 480	60	
SDTV (480p)	720 x 480	60	
SDTV (576i)	720 x 576	50	
SDTV (576p)	720 x 576	50	
WSVGA (1024 x 600)	1024 x 600	60	
HDTV (720p)	1280 x 720	50(*2)/60/ 120(*2)	Mac 60
WXGA	1280 x 768	60/75/85	Mac 75
	1280 x 800	48/60(*2)/ 120(*2)	Mac 60
WXGA	1366 x 768	60	Mac 60
WXGA+	1440 x 900	60	Mac 60
SXGA	1280 x 1024	60/75/85	Mac 60/75
SXGA+	1400 x 1050	60	
UXGA	1600 x 1200	60	
HDTV (1080i)	1920 x 1080	50/60	
HDTV (1080p)	1920 x 1080	24/30/50/60	Mac 60
WUXGA	1920 x 1200 (*1)	50/60	Mac 60

(*1) 1920 x 1200 @60Hz only support RB (reduced blanking).

(*2) 3D support.(Option)


True 3D Video Compatibility table

Input Resolutions	Input timing		
HDMI 1.4a 3D Input	1280 x 720p @50Hz	Top-and-Bottom	
	1280 x 720p @60Hz	Top-and-Bottom	
	1280 x 720p @50Hz	Frame packing	
	1280 x 720p @60Hz	Frame packing	
	1920 x 1080i @50Hz	Side-by-Side (Half)	
	1920 x 1080i @60Hz	Side-by-Side (Half)	
	1920 x 1080p @24Hz	Top-and-Bottom	
	1920 x 1080p @24Hz	Frame packing	
HDMI 1.3	1920 x 1080i @50Hz	Side-by-Side (Half)	SBS mode is on
	1920 x 1080i @60Hz		
	1280 x 720p @50Hz		
	1280 x 720p @60Hz		
	1920 x 1080i @50Hz	Top-and-Bottom	TAB mode is on
	1920 x 1080i @60Hz		
	1280 x 720p @50Hz		
	1280 x 720p @60Hz	HQFS	3D format is Frame sequential
480i			

- ▶ If 3D input is 1080p @24Hz, the DMD should replay with integral multiple with 3D mode.
- ▶ 1080i @25Hz and 720p @50Hz will run in 100Hz; other 3D timing will run in 120Hz.

RS232 Commands and Protocol Function List

RS232 Pin Assignments (projector side)

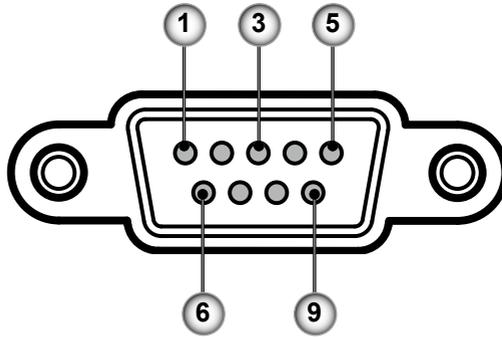

Pin no.	Name	I/O (From Projector Side)
1	NC	—
2	RXD	IN
3	TXD	OUT
4	NC	—
5	NC	—
6	NC	—
7	RS232	RTS
8	RS232	CTS
9	NC	—

Appendices

RS232 Protocol Function List

SEND to projector

232 ASCII Code Function	HEX Code Description
~XX00 1	7E 30 30 30 30 20 31 0D
Power ON	
~XX00 0	7E 30 30 30 30 20 30 0D
Power OFF	(0/2 for backward compatible)
~XX00 1 ~nnnnn	7E 30 30 30 30 20 31 20 a 0D
Power ON with Password	~nnnnn = ~00000 (a=7E 30 30 30 30 30) ~99999 (a=7E 39 39 39 39 39)
~XX01 1	7E 30 30 30 31 20 31 0D
Resync	
~XX02 1	7E 30 30 30 32 20 31 0D
AV Mute	On
~XX02 0	7E 30 30 30 32 20 30 0D
	Off (0/2 for backward compatible)
~XX03 1	7E 30 30 30 33 20 31 0D
Mute	On
~XX03 0	7E 30 30 30 33 20 30 0D
	Off (0/2 for backward compatible)
~XX04 1	7E 30 30 30 34 20 31 0D
Freeze	
~XX04 0	7E 30 30 30 34 20 30 0D
Unfreeze	(0/2 for backward compatible)
~XX05 1	7E 30 30 30 35 20 31 0D
Zoom Plus	
~XX06 1	7E 30 30 30 36 20 31 0D
Zoom Minus	

Appendices

232 ASCII Code Function	HEX Code Description
~XX12 1	7E 30 30 31 32 20 31 0D
Direct Source Commands	HDMI
~XX12 5	7E 30 30 31 32 20 35 0D
	VGA1
~XX12 6	7E 30 30 31 32 20 36 0D
	VGA 2
~XX12 9	7E 30 30 31 32 20 39 0D
	S-Video
~XX12 10	7E 30 30 31 32 20 31 30 0D
	Video
~XX12 20	7E 30 30 31 32 20 32 30 0D
	DisplayPort
~XX20 1	7E 30 30 32 30 20 31 0D
Display Mode	Presentation
~XX20 2	7E 30 30 32 30 20 32 0D
	Bright
~XX20 3	7E 30 30 32 30 20 33 0D
	Movie
~XX20 4	7E 30 30 32 30 20 34 0D
	sRGB
~XX20 5	7E 30 30 32 30 20 35 0D
	User
~XX20 7	7E 30 30 32 30 20 37 0D
	Blackboard
~XX20 13	7E 30 30 32 30 21 33 0D
	DICOM SIM.
~XX20 9	7E 30 30 32 30 20 39 0D
	3D

Appendices

232 ASCII Code Function	HEX Code Description
~XX21 n	7E 30 30 32 31 20 a 0D
Brightness	n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX22 n	7E 30 30 32 32 20 a 0D
Contrast	n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX23 n	7E 30 30 32 33 20 a 0D
Sharpness	n = 1 (a=30 31) ~ 15 (a=31 35)
~XX327 n	7E 58 58 33 32 37 20 a 0D
Color Matching	Red Hue n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX328 n	7E 58 58 33 32 38 20 a 0D
	Green Hue n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX329 n	7E 58 58 33 32 39 20 a 0D
	Blue Hue n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX330 n	7E 58 58 33 33 30 20 a 0D
	Cyan Hue n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX331 n	7E 58 58 33 33 31 20 a 0D
	Yellow Hue n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX332 n	7E 58 58 33 33 32 20 a 0D
	Magenta Hue n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX333 n	7E 58 58 33 33 33 20 a 0D
	Red Saturation n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX334 n	7E 58 58 33 33 34 20 a 0D
	Green Saturation n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX335 n	7E 58 58 33 33 35 20 a 0D
	Blue Saturation n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX336 n	7E 58 58 33 33 36 20 a 0D
	Cyan Saturation n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX337 n	7E 58 58 33 33 37 20 a 0D
	Yellow Saturation n = -50 (a=2D 35 30) ~ 50 (a=35 30)

Appendices

232 ASCII Code Function	HEX Code Description
~XX338 n	7E 58 58 33 33 38 20 a 0D Magenta Saturationn n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX339 n	7E 58 58 33 33 39 20 a 0D Red Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX340 n	7E 58 58 33 34 30 20 a 0D Green Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX341 n	7E 58 58 33 34 31 20 a 0D Blue Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX342 n	7E 58 58 33 34 32 20 a 0D Cyan Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX343 n	7E 58 58 33 34 33 20 a 0D Yellow Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX344 n	7E 58 58 33 34 34 20 a 0D Magenta Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX345 n	7E 58 58 33 34 35 20 a 0D White/R n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX346 n	7E 58 58 33 34 36 20 a 0D White/G n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX347 n	7E 58 58 33 34 37 20 a 0D White/B n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX34 n	7E 30 30 33 34 20 a 0D
BrilliantColorTM	n = 1 (a=30 31) ~ 10 (a=31 30)
~XX35 1	7E 30 30 33 35 20 31 0D
Gamma	Film
~XX35 2	7E 30 30 33 35 20 32 0D Video
~XX35 3	7E 30 30 33 35 20 33 0D Graphics

Appendices

232 ASCII Code Function	HEX Code Description
~XX35 4	7E 30 30 33 35 20 34 0D
	Standard
~XX36 3	7E 30 30 33 36 20 30 0D
Color Temp.	Warm
~XX36 0	7E 30 30 33 36 20 31 0D
	Standard
~XX36 1	7E 30 30 33 36 20 32 0D
	Cool
~XX36 2	7E 30 30 33 36 20 33 0D
	Cold
~XX37 1	7E 30 30 33 37 20 31 0D
Color Space	Auto
~XX37 2	7E 30 30 33 37 20 32 0D
	RGB\ RGB(0-255)
~XX37 3	7E 30 30 33 37 20 33 0D
	YUV
~XX37 4	7E 30 30 33 37 20 34 0D
	RGB(16 - 235)
~XX73 n	7E 30 30 37 33 20 a 0D
Signal	Frequency n = -5 (a=2D 35) ~ 5 (a=35) By signal
~XX91 1	7E 30 30 39 31 20 31 0D
	Automatic On
~XX91 0	7E 30 30 39 31 20 30 0D
	Off
~XX74 n	7E 30 30 37 34 20 a 0D
	Phase n = 0 (a=30) ~ 31 (a=33 31) By signal
~XX75 n	7E 30 30 37 35 20 a 0D
	H. Position n = -5 (a=2D 35) ~ 5 (a=35) By timing

Appendices

232 ASCII Code Function	HEX Code Description
~XX76 n	7E 30 30 37 36 20 a 0D V. Position n = -5 (a=2D 35) ~ 5 (a=35) By timing
~XX45 n	7E 30 30 34 34 20 a 0D
Color (Saturation)	n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX44 n	7E 30 30 34 35 20 a 0D
Tint	n = -50 (a=2D 35 30) ~ 50 (a=35 30))
~XX60 1	7E 30 30 36 30 20 31 0D
Format	4:3
~XX60 2	7E 30 30 36 30 20 32 0D 16:9
~XX60 3	7E 30 30 36 30 20 33 0D 16:10(WXGA)
~XX60 5	7E 30 30 36 30 20 35 0D LBX
~XX60 6	7E 30 30 36 30 20 36 0D Native
~XX60 7	7E 30 30 36 30 20 37 0D Auto
~XX61 n	7E 30 30 36 31 20 a 0D
Edge mask	n = 0 (a=30) ~ 10 (a=31 30)
~XX62 n	7E 30 30 36 32 20 a 0D
Zoom	n = -5 (a=2D 35) ~ 25 (a=32 35)
~XX63 n	7E 30 30 36 33 20 a 0D
H Image Shift	n = -100 (a=2D 31 30 30) ~ 100 (a=31 30 30)
~XX64 n	7E 30 30 36 34 20 a 0D
V Image Shift	n = -100 (a=2D 31 30 30) ~ 100 (a=31 30 30)
~XX66 n	7E 30 30 36 36 20 a 0D
V Keystone	n = -40 (a=2D 34 30) ~ 40 (a=34 30)

Appendices

232 ASCII Code Function	HEX Code Description
~XX230 1	7E 30 30 32 33 30 20 31 0D
3D Mode	DLP-Link
~XX230 3	7E 30 30 32 33 30 20 31 0D
3D Mode	IR
~XX400 0	7E 30 30 34 30 30 20 30 0D
3D→2D	3D
~XX400 1	7E 30 30 34 30 30 20 31 0D
	L
~XX400 2	7E 30 30 34 30 30 20 32 0D
	R
~XX405 0	7E 30 30 34 30 35 20 30 0D
3D Format	Auto
~XX405 1	7E 30 30 34 30 35 20 31 0D
	SBS
~XX405 2	7E 30 30 34 30 35 20 32 0D
	Top and Bottom
~XX405 3	7E 30 30 34 30 35 20 33 0D
	Frame sequential
~XX231 0	7E 30 30 32 33 31 20 30 0D
3D Sync Invert	On
~XX231 1	7E 30 30 32 33 31 20 31 0D
3D Sync Invert	Off
~XX70 1	7E 30 30 37 30 20 31 0D
Language	English
~XX70 2	7E 30 30 37 30 20 32 0D
	German
~XX70 3	7E 30 30 37 30 20 33 0D
	French

Appendices

232 ASCII Code Function	HEX Code Description
~XX70 4	7E 30 30 37 30 20 34 0D Italian
~XX70 5	7E 30 30 37 30 20 35 0D Spanish
~XX70 6	7E 30 30 37 30 20 36 0D Portuguese
~XX70 7	7E 30 30 37 30 20 37 0D Polish
~XX70 8	7E 30 30 37 30 20 38 0D Dutch
~XX70 9	7E 30 30 37 30 20 39 0D Swedish
~XX70 10	7E 30 30 37 30 20 31 30 0D Norwegian/Danish
~XX70 11	7E 30 30 37 30 20 31 31 0D Finnish
~XX70 12	7E 30 30 37 30 20 31 32 0D Greek
~XX70 13	7E 30 30 37 30 20 31 33 0D Traditional Chinese
~XX70 14	7E 30 30 37 30 20 31 34 0D Simplified Chinese
~XX70 15	7E 30 30 37 30 20 31 35 0D Japanese
~XX70 16	7E 30 30 37 30 20 31 36 0D Korean
~XX70 17	7E 30 30 37 30 20 31 37 0D Russian

Appendices

232 ASCII Code	HEX Code
Function	Description
~XX70 18	7E 30 30 37 30 20 31 38 0D
	Hungarian
~XX70 19	7E 30 30 37 30 20 31 39 0D
	Czechoslovak
~XX70 20	7E 30 30 37 30 20 32 30 0D
	Arabic
~XX70 21	7E 30 30 37 30 20 32 31 0D
	Thai
~XX70 22	7E 30 30 37 30 20 32 32 0D
	Turkish
~XX70 23	7E 30 30 37 30 20 32 33 0D
	Farsi
~XX70 25	7E 30 30 37 30 20 32 35 0D
	Vietnamese
~XX70 26	7E 30 30 37 30 20 32 36 0D
	Indonesian
~XX70 27	7E 30 30 37 30 20 32 37 0D
	Romanian
~XX71 1	7E 30 30 37 31 20 31 0D
Projection	Front-Desktop
~XX71 2	7E 30 30 37 31 20 32 0D
	Rear-Desktop
~XX71 3	7E 30 30 37 31 20 33 0D
	Front-Ceiling
~XX71 4	7E 30 30 37 31 20 34 0D
	Rear-Ceiling
~XX72 1	7E 30 30 37 32 20 31 0D
Menu Location	Top Left

Appendices

232 ASCII Code Function	HEX Code Description
~XX72 2	7E 30 30 37 32 20 32 0D
	Top Right
~XX72 3	7E 30 30 37 32 20 33 0D
	Centre
~XX72 4	7E 30 30 37 32 20 34 0D
	Bottom Left
~XX72 5	7E 30 30 37 32 20 35 0D
	Bottom Right

(WXGA)

232 ASCII Code Function	HEX Code Description
~XX90 1	7E 30 30 39 31 20 31 0D
Screen Type	16:10
~XX90 0	7E 30 30 39 31 20 30 0D
	16:9
~XX77 n	7E 30 30 37 37 20 aabbcc 0D
Security	Security Timer Month/Day/Hour n = mm/dd/hh
	mm= 00 (aa=30 30) ~ 12 (aa=31 32)
	dd = 00 (bb=30 30) ~ 30 (bb=33 30)
	hh= 00 (cc=30 30) ~ 24 (cc=32 34)
~XX78 1	7E 30 30 37 38 20 31 0D
	Security Settings Enable
~XX78 0 ~nnnnn	7E 30 30 37 38 20 32 20 a 0D
	Disable(0/2 for backward compatible)
	~nnnnn = ~00000 (a=7E 30 30 30 30 30)
	~99999 (a=7E 39 39 39 39 39)

Appendices

232 ASCII Code Function	HEX Code Description
~XX79 n	7E 30 30 37 39 20 a 0D
Projector ID	n = 00 (a=30 30) ~ 99 (a=39 39)
~XX80 1	7E 30 30 38 30 20 31 0D
Mute	On
~XX80 0	7E 30 30 38 30 20 30 0D
	Off (0/2 for backward compatible)
~XX310 0	7E 30 33 31 30 20 30 0D
Internal Speaker	Off
~XX310 1	7E 30 33 31 30 20 31 0D
	On
~XX81 n	7E 30 30 38 31 20 a 0D
Volume(Audio)	n = 0 (a=30 30) ~ 10 (a=31 30)
~XX89 0	7E 30 30 38 39 20 30 0D
Audio Input	Default
~XX89 1	7E 30 30 38 39 20 31 0D
	Audio1
~XX89 3	7E 30 30 38 39 20 33 0D
	Audio2
~XX82 1	7E 30 30 38 32 20 31 0D
Logo	Default
~XX82 2	7E 30 30 38 32 20 32 0D
	User
~XX82 3	7E 30 30 38 32 20 33 0D
	Neutral
~XX83 1	7E 30 30 38 33 20 31 0D
Logo Capture	
~XX88 0	7E 30 30 38 38 20 30 0D
Closed Captioning	Off

Appendices

232 ASCII Code Function	HEX Code Description
~XX88 1	7E 30 30 38 38 20 31 0D
	cc1
~XX88 2	7E 30 30 38 38 20 32 0D
	cc2
~XX454 0	7E 30 30 34 35 34 20 30 0D
Crestron	Off
~XX454 1	7E 30 30 34 35 34 20 31 0D
	On
~XX455 0	7E 30 30 34 35 35 20 30 0D
Extron	Off
~XX455 1	7E 30 30 34 35 35 20 31 0D
	On
~XX456 0	7E 30 30 34 35 36 20 30 0D
PJLink	Off
~XX456 1	7E 30 30 34 35 36 20 31 0D
	On
~XX457 0	7E 30 30 34 35 37 20 30 0D
AMX Device Discovery	Off
~XX457 1	7E 30 30 34 35 37 20 31 0D
	On
~XX458 0	7E 30 30 34 35 38 20 30 0D
Telnet	Off
~XX458 1	7E 30 30 34 35 38 20 31 0D
	On
~XX100 1	7E 30 30 31 30 30 20 31 0D
Source Lock	On
~XX100 0	7E 30 30 31 30 30 20 30 0D
	Off (0/2 for backward compatible)

Appendices

232 ASCII Code Function	HEX Code Description
~XX101 1	7E 30 30 31 30 31 20 31 0D
High Altitude	On
~XX101 0	7E 30 30 31 30 31 20 30 0D
	Off (0/2 for backward compatible)
~XX102 1	7E 30 30 31 30 32 20 31 0D
Information Hide	On
~XX102 0	7E 30 30 31 30 32 20 30 0D
	Off (0/2 for backward compatible)
~XX103 1	7E 30 30 31 30 33 20 31 0D
Keypad Lock	On
~XX103 0	7E 30 30 31 30 33 20 30 0D
	Off (0/2 for backward compatible)
~XX195 0	7E 30 30 31 39 35 20 30 0D
Test Pattern	None
~XX195 1	7E 30 30 31 39 35 20 31 0D
	Grid
~XX195 2	7E 30 30 31 39 35 20 32 0D
	White Pattern
~XX192 0	7E 30 30 31 39 32 20 30 0D
12V Trigger	Off
~XX192 1	7E 30 30 31 39 32 20 31 0D
	On
~XX192 3	7E 30 30 31 39 32 20 33 0D
	Auto 3D
~XX11 0	7E 30 30 31 31 20 30 0D
IR Function	Off
~XX11 1	7E 30 30 31 31 20 31 0D
	On

Appendices

232 ASCII Code	HEX Code
Function	Description
~XX104 1	7E 30 30 31 30 34 20 31 0D
Background Color	Blue
~XX104 2	7E 30 30 31 30 34 20 32 0D
	Black
~XX104 3	7E 30 30 31 30 34 20 33 0D
	Red
~XX104 4	7E 30 30 31 30 34 20 34 0D
	Green
~XX104 5	7E 30 30 31 30 34 20 35 0D
	White
~XX105	7E 30 30 31 30 35 20 31 0D
Advanced	Direct Power On On
~XX105 0	7E 30 30 31 30 35 20 30 0D
	Off (0/2 for backward compatible)
~XX113 0	7E 30 30 31 31 33 20 30 0D
	Signal Power On Off
~XX113 1	7E 30 30 31 31 33 20 31 0D
	On
~XX106 n	7E 30 30 31 30 36 20 a 0D
	Auto Power Off (min) n = 0 (a=30) ~ 180 (a=31 38 30)
	(5 minutes for each step).
~XX107 n	7E 30 30 31 30 37 20 a 0D
	Sleep Timer (min) n = 0 (a=30) ~ 990 (a=39 39 30)
	(30 minutes for each step).
~XX115 1	7E 30 30 31 31 35 20 31 0D
	Quick Resume On
~XX115 0	7E 30 30 31 31 35 20 30 0D
	Off (0/2 for backward compatible)

Appendices

232 ASCII Code Function	HEX Code Description
~XX114 1	7E 30 30 31 31 34 20 31 0D Power Mode(Standby) Eco.($\leq 0.5W$)
~XX114 0	7E 30 30 31 31 34 20 30 0D Active (0/2 for backward compatible)
~XX109 1	7E 30 30 31 30 39 20 31 0D Lamp Reminder On
~XX109 0	7E 30 30 31 30 39 20 30 0D Off (0/2 for backward compatible)
~XX110 1	7E 30 30 31 31 30 20 31 0D Brightness Mode Bright
~XX110 2	7E 30 30 31 31 30 20 32 0D Eco.
~XX191 0	7E 30 30 31 39 31 20 30 0D DynamicBlack Off
~XX191 1	7E 30 30 31 39 31 20 31 0D On
~XX111 1	7E 30 30 31 31 31 20 31 0D Lamp Reset Yes
~XX111 0	7E 30 30 31 31 31 20 30 0D No (0/2 for backward compatible)
~XX112 1	7E 30 30 31 31 32 20 31 0D
Reset	Yes

Appendices

SEND to emulate Remote

232 ASCII Code Function	HEX Code Description
~XX140 10	7E 30 30 31 34 30 20 31 30 0D Up
~XX140 11	7E 30 30 31 34 30 20 31 31 0D Left
~XX140 12	7E 30 30 31 34 30 20 31 32 0D Enter (for projection MENU)
~XX140 13	7E 30 30 31 34 30 20 31 33 0D Right
~XX140 14	7E 30 30 31 34 30 20 31 34 0D Down
~XX140 15	7E 30 30 31 34 30 20 31 35 0D Keystone +
~XX140 16	7E 30 30 31 34 30 20 31 36 0D Keystone -
~XX140 17	7E 30 30 31 34 30 20 31 37 0D Volume -
~XX140 18	7E 30 30 31 34 30 20 31 38 0D Volume +
~XX140 19	7E 30 30 31 34 30 20 31 39 0D Brightness
~XX140 20	7E 30 30 31 34 30 20 32 30 0D Menu
~XX140 21	7E 30 30 31 34 30 20 32 31 0D Zoom
~XX140 28	7E 30 30 31 34 30 20 32 38 0D Contrast
~XX140 47	7E 30 30 31 34 30 20 34 37 0D Source

Appendices

SEND from projector automatically

232 ASCII Code	HEX Code	
Function	Projector Return	Description
when Standby/ Warming/Cooling/ Out of Range/Lamp fail/Fan Lock/Over Temperature/ Lamp Hours Running Out/ Cover Open	INFOn	n : 0/1/2/3/4/6/7/8/ = Standby/Warming/ Cooling/Out of Range/ Lamp fail/Fan Lock/Over Temperature/Lamp Hours Running Out/Cover Open

READ from projector

232 ASCII Code	HEX Code	
Function	Projector Return	Description
~XX121 1	7E 30 30 31 32 31 20 31 0D	
Input Source Commands	OKn	n : 0/2/3/4/5/7/15 = None/ VGA1/VGA2/Video/S- Video/HDMI/ DisplayPort
~XX122 1	7E 30 30 31 32 32 20 31 0D	
Software Version	OKdddd	dddd: FW version
~XX123 1	7E 30 30 31 32 33 20 31 0D	
Display Mode	OKn	n : 0/1/2/3/4/5/6/7/8/ None/Presentation/ Bright/Movie/sRGB/ User/Blackboard/DICOM SIM./3D
~XX124 1	7E 30 30 31 32 34 20 31 0D	
Power State	OKn	n : 0/1 = Off/On
~XX125 1	7E 30 30 31 32 35 20 31 0D	
Brightness	OKn	
~XX126 1	7E 30 30 31 32 36 20 31 0D	
Contrast	OKn	
~XX127 1	7E 30 30 31 32 37 20 31 0D	
Format	OKn	n: 1/2/3/5/6/7= 4:3/16:9/16:10/LBX/ Native/AUTO *16:9 or 16:10 depend on Screen Type setting

Appendices

232 ASCII Code		HEX Code	
Function	Projector Return	Description	
~XX128 1	7E 30 30 31 32 38 20 31 0D		
Color Temperature	OKn	n : 3/0/1/2 = Warm/ Standard/Cool/Cold	
~XX129 1	7E 30 30 31 32 39 20 31 0D		
Projection Mode	OKn	n : 0/1/2/3 = Front- Desktop/ Rear-esktop/ Front-Ceiling/ Rear-Ceiling	
~XX150 1	7E 30 30 31 35 30 20 31 0D		
Information	OKabbbbccdddde	a : 0/1 = Off/On bbbb: LampHour cc: source 00/02/03/04/05/07/08/15 = None/VGA1/VGA2/ Video/S-Video/HDMI/ DisplayPort dddd: FW version e : Display mode 0/1/2/3/4/5/6/7/8/ None/Presentation/Bright/ Movie/sRGB/ User/Blackboard/ DICOM SIM /3D	
~XX151 1	7E 30 30 31 35 31 20 31 0D		
Model name	OKn	n:1/2=W415/EH415	
~XX108 1	7E 30 30 31 30 38 20 31 0D		
Lamp Hours	OKbbbb	bbbb: LampHour	
~XX108 2	7E 30 30 31 30 38 20 31 0D		
Cumulative Lamp Hours	OKbbbbbb	bbbbbb: (5 digits) Total Lamp Hours	
~XX87 1	7E 30 30 38 37 20 31 0D		
Network Status	Okn	n=0/1 Disconnected/ Connected	
~XX87 3	7E 30 30 38 37 20 33 0D		
IP Address	Okaaa_bbb_ccc_ddd		

Telnet Commands

- ▶ Port: support 3 ports of 23/1023/2023
- ▶ Multi-connections: Projector could receive commands from different ports at the same time
- ▶ Command Format: Follow RS232 command format (support both of ASCII and HEX)
- ▶ Command Response: Follow RS232 return message.

Lead Code	Projector ID		Command ID			Space	Variable	Carriage Return
~	x	x	x	x	x		n	CR
Fix code One Digit~	00		Defined by Optoma 2 or 3 Digit. See the Follow content			One Digit	Per item Definition	Fix code One Digit



- For wide screen resolution (WXGA), the compatibility support is dependent on Notebook/PC models.

AMX Device Discovery commands

- ▶ DP : 239.255.250.250
- ▶ Port No. : 9131
- ▶ Each UDP broadcast information as below are updated around 40 seconds

Command	Description	Remark (Parameter)
Device-UUID	MAC address (Hex value without' ':' separator)	12 digits
Device-SKDCClass	The Duet DeviceSdk class name	VideoProjector
Device-Make	Maker name	MakerPXLW
Device-Model	Model name	Projector

Command	Description	Remark (Parameter)
Config-URL	Device's IP address LAN IP address is shown up if LAN IP address is valid. Wireless LAN IP address is shown up if Wireless LAN IP address is valid.	http://xxx.xxx.xxx.xxx/index.html
Revision	The revision must follow a major.minor.micro scheme. The revision is only increased if the command protocol is modified.	1.0.0



- For wide screen resolution (WXGA), the compatibility support is dependent on Notebook/PC models.
- This AMX function is only to support AMX Device Discovery.
- The broadcast information only send out through valid interface.
- Both LAN and Wireless LAN interfaces could be supported at the same time.
- If "Beacon Validator" was used. Please take care below information.

PJLink™ supported commands

The table below shows commands to control the projector using the PJLink™ protocol.

Command Description Remark (Parameter)

Command	Description	Remark (Parameter)
POWR	Power control	0 = Standby
		1 = Power on
POWR?	Inquiry about the power state	0 = Standby
		1 = Power on
		2 = Cooling down
		3 = Warming up

Appendices



Note

This projector is fully compliant to the specifications of JBMIA PJLink™ Class 1. It supports all the commands defined by PJLink™ Class 1, and the compliance has been verified with the PJLink™ standard specifications Version 1.0.

Command	Description	Remark (Parameter)
INPT	INPT Input switching	11 = VGA1
INPT?	Inquiry about input switching	12 = VGA2
		13 = Component
		14 = BNC
		21 = VIDEO
		22 = S-VIDEO
		31 = HDMI 1
		32 = HDMI 2
AVMT	Mute control	30 = Video and audio mute disable
AVMT?	Inquiry about the mute state	31 = Video and audio mute enable
ERST?	Inquiry about the error state	1st byte: Fan error, 0 or 2
		2nd byte: Lamp error, 0 to 2
		3rd byte: Temperature error, 0 or 2
		4th byte: Cover open error, 0 or 2
		5th byte: Filter error, 0 or 2
		6th byte: Other error, 0 or 2
		0 to 2 mean as follows: 0 = No error detected, 1 = Warning, 2 = Error
LAMP?	Inquiry about the lamp state	1st value (1 to 5 digits): Cumulative LAMP operating time (This item shows a lamp operating time (hour) calculated based on that LAMP MODE is LOW.)
		2nd value: 0 = Lamp off, 1 = Lamp on

Command	Description	Remark (Parameter)
INST?	Inquiry about the available inputs	The following value is returned. "11 12 21 22 31 32"
NAME?	Inquiry about the projector name	The projector name set on the NETWORK menu or the ProjectorView Setup window is returned
INF1?	Inquiry about the manufacturer name	"Optoma" is returned.
INF2?	Inquiry about the model name	"EH7700" is returned.
INF0?	Inquiry about other information	No other information is available. No parameter is returned.
CLSS?	Inquiry about the class information	"1" is returned.

Trademarks

- ▶ DLP is trademarks of Texas Instruments.
- ▶ IBM is a trademark or registered trademark of International Business Machines Corporation.
- ▶ Macintosh, Mac OS X, iMac, and PowerBook are trademarks of Apple Inc., registered in the U.S. and other countries.
- ▶ Microsoft, Windows, Windows Vista, Internet Explorer and PowerPoint are either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- ▶ HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- ▶ AMX Device Discovery

The projector is monitored and controlled by the control system of AMX.

Appendices

- ▶ Crestron RoomView Connected™

The projector is monitored and controlled by the control system and software of Crestron Electronics, Inc.

- ▶ PJLink™

PJLink trademark is a trademark applied for registration or is already registered in Japan, the United States of America and other countries and areas.

This projector supports standard protocol PJLink™ for projector control and you can control and monitor projector's operations using the same application among projectors of different models and different manufacturers.

- ▶ Other product and company names mentioned in this user's manual may be the trademarks or registered trademarks of their respective holders.

- ▶ About Crestron RoomView Connected™

Electronics, Inc. to facilitate configuration of the control system of Crestron and its target devices.

For details, see the website of Crestron Electronics, Inc.

URL <http://www.crestron.com>

URL <http://www.crestron.com/getroomview/>

Ceiling Mount Installation

1. To prevent damage to your projector, please use the Optoma ceiling mount.
2. If you wish to use a third party ceiling mount kit, please ensure the screws used to attached a mount to the projector met the following specifications:

- ▶ Screw type: M4
- ▶ Maximum screw length: 11mm
- ▶ Minimum screw length: 9mm


Note

Please note that damage resulting from incorrect installation will invalidate the warranty.



Warning:

1. If you buy ceiling mount from other company, please be sure to use the correct screw size. Screw size will be different on different mounts. It depends on the plate thickness.
2. Be sure to keep at least 10cm gap between the ceiling and the bottom of the projector.
3. Avoid installing the projector near a heat source.

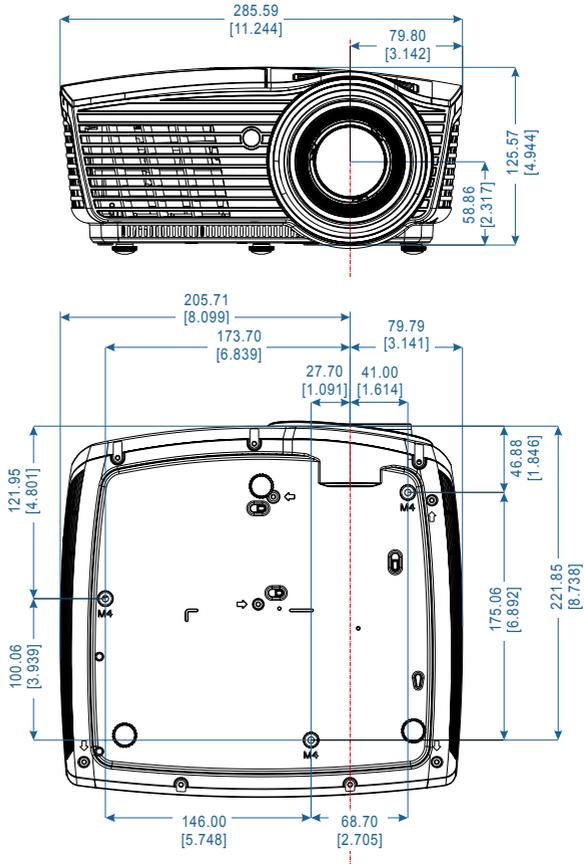

Optoma Global Offices

For service or support please contact your local office.

USA

3178 Laurelview Ct.,
Fremont, CA 94538, USA
www.optomausa.com

Tel : 888-289-6786

Service : services@optoma.com

Canada

2420 Meadowpine Blvd., Suite #105,
Mississauga, ON, L5N 6S2, Canada
www.optoma.ca

Tel : 888-289-6786

Fax : 510-897-8601

Service : services@optoma.com

Europe

42 Caxton Way, The Watford Business Park
Watford, Hertfordshire,
WD18 8QZ, UK
www.optoma.eu

Tel : +44 (0) 1923 691 800

Fax : +44 (0) 1923 691 888

Service Tel : +44 (0)1923 691865

Service : service@tsc-europe.com

France

Bâtiment E
81-83 avenue Edouard Vaillant
92100 Boulogne Billancourt, France

Tel : +33 1 41 46 12 20

Fax : +33 1 41 46 94 35

Service : savoptoma@optoma.fr

Spain

C/ José Hierro,36 Of. 1C
28522 Rivas VaciaMadrid,
Spain

Tel : +34 91 499 06 06

Fax : +34 91 670 08 32

Deutschland

Wiesenstrasse 21 W
D40549 Düsseldorf,
Germany

Tel : +49 (0) 211 506 6670

Fax : +49 (0) 211 506 66799

Service : info@optoma.de

Scandinavia

Lerpeveien 25
3040 Drammen
Norway

Tel : +47 32 98 89 90
FAX : +47 32 98 89 99
Service : info@optoma.no

PO.BOX 9515
3038 Drammen
Norway

Latin America

3178 Laurelview Ct.
Fremont, CA 94538, USA
www.optoma.com.br

Tel : 888-289-6786
Fax: 510-897-8601
www.optoma.com.mx

Taiwan

231, 新北市新店區北新路3段213號12樓

電話 : +886-2-8911-8600

服務處 : services@optoma.com.tw

傳真 : +886-2-8911-6550

www.optoma.com.tw
asia.optoma.com

Hong Kong

Unit A, 27/F Dragon Centre, 79 Wing Hong Street,
Cheung Sha Wan Kowloon, Hong Kong

Tel : +852-2396-8968

Fax: +852-2370-1222

www.optoma.com.hk

China

上海市长宁区凯旋路1205号5楼

邮编: 200052

www.optoma.com.cn

电话: +86-21-62947376

传真: +86-21-62947375

Japan

東京都足立区綾瀬 3-25-18

株式会社オーエスエム

E-Mail: info@osscreen.com

サポートセンター: 0120-46-5040

<http://www.os-worldwide.com/>

Korea

WOOMI TECH.CO.,LTD.

4F, Minu Bldg.33-14, Kangnam-Ku,
seoul,135-815, KOREA

Tel : +82+2+34430004

Fax: +82+2+34430005

Regulation & Safety Notices

This appendix lists the general notices of your Projector.

FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ■ Reorient or relocate the receiving antenna.
- ■ Increase the separation between the device and receiver.
- ■ Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- ■ Consult the dealer or an experienced radio/television technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for EU countries

- EMC Directive 2004/108/EC (including amendments)
- Low Voltage Directive 2006/95/EC
- R & TTE Directive 1999/5/EC
(if product has RF function)

Disposal instructions



Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle it.